

Front Access Cover for Sea-Doo Spark 2024+

SAUTVS®

YAP-030603-255

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This FRONT ACCESS COVER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove two each screws (A) and nuts (B) from LH ROPS as shown. Nuts will be reused. Screws will not be reused.




3. Remove the original access cover. Replace it with a new cover plate and secure it by locking the latches. (Note: During installation, first position the front edge of the cover plate over the inspection hole and slide it forward horizontally to ensure the rear retaining groove of the cover plate properly engages the hole's edge.)



Front Access Cover for Sea-Doo Spark 2024+

YAP-030603-255

SAUTV5

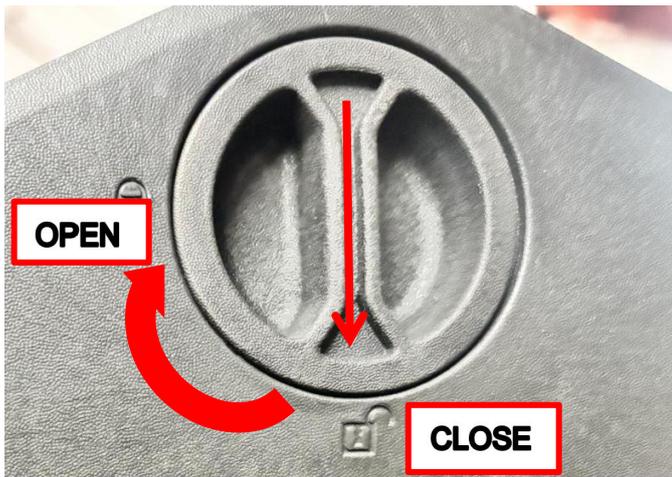

4. Installation complete.

