

Fender Flares for Kawasaki Teryx KRX 4 1000

SAUTVS®

ZP-YJ-031010-002

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

These Fender Flares are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product and accessories.



Installation steps for front fender flares:

1. First, assemble the split fender flares into a whole through screws. As shown below:

Note: The edge position is fixed with the smallest self tapping screw, and the middle section is fixed with M6 * 16 screws



2. Unscrew the screws on the front fender flares of the original vehicle, and then install the assembled widened fender flares onto the original fender flares. Use the screws and nuts (M6 * 30) provided with the product at the original screw holes to secure them again. As shown below:



Fender Flares for Kawasaki Teryx KRX 4 1000

ZP-YJ-031010-002



3. Prepare an 8mm drill bit, drill corresponding fixing holes according to the positioning holes on the widened fender flares, and fix them with nylon fasteners. Finally, use longer self tapping screws to fix the remaining screw holes. As shown below:




Installation steps for rear fender flares:

4. Referring to the installation method of the front fender flares, first assemble the split fender flares into a whole through screws. As shown below:

Note: The edge position is fixed with the smallest self tapping screw, and the middle section is fixed with M6 * 16 screws

Fender Flares for Kawasaki Teryx KRX 4 1000

ZP-YJ-031010-002

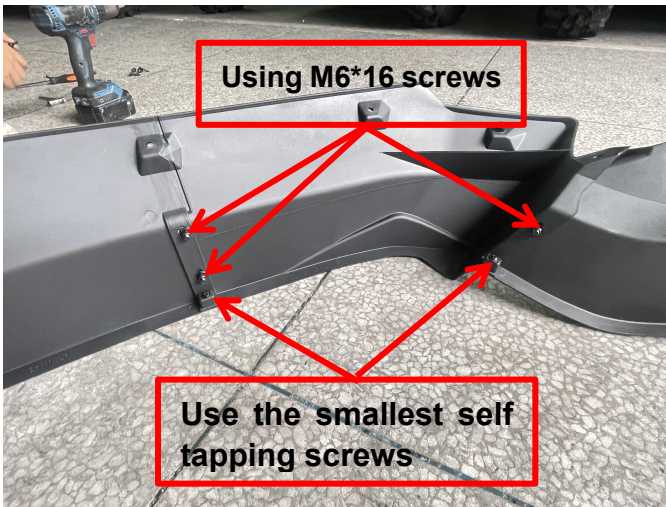

6. Prepare a 6mm drill bit, drill corresponding fixing holes according to the positioning holes on the widened fender flares, and fix them using the screws and nuts provided with the product (using M6 * 30 screws). Assemble the other side in sequence according to the above steps. As shown below:



5. Unscrew the screws on the rear fender flares of the original vehicle, and then install the assembled widened fender flares onto the original fender flares. Use the screws and nuts (M6 * 30) provided with the product at the original screw holes to secure them again. As shown below:



Fender Flares for Kawasaki Teryx KRX 4 1000

SAUTVS[®]

ZP-YJ-031010-002



7. The installation is complete.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.