

### **BEFORE YOU BEGIN**

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

## **IMPORTANT**

This CARGO STORAGE BOX SET KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

### INSTALLATION INSTRUCTIONS

## **Side Cargo Storage Boxes**

- 1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
- 2. Product image.



3. First distinguish the left and right sides of the storage box, when installing the storage box, the positioning bracket on one end of the box will be stuck into the original vehicle's reserved fixing holes, and the other side of the box will be correspondingly stuck into the original vehicle's fixing buckle.







# Cargo Storage Box Set For Can-Am Maverick R

## ZP-YJ-030608-014



4. Finally, just open the lid of the storage box and lock the safety valve from the inside. (The other side is installed in the same way).



5. Installation completed.





## Rear Cargo Storage Box

1. Product image.



2. Snap the fixing bracket at the bottom of the storage box and the fixing lock into the original vehicle latch, then open the lid of the storage box and lock the safety valve from the inside.

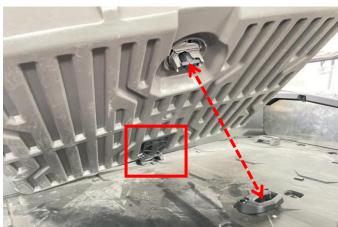

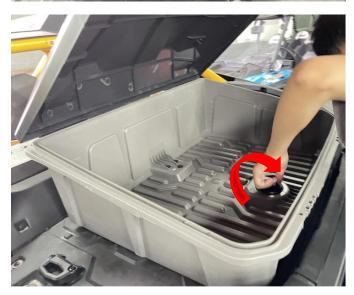

3. Installation completed.

