

# Nerf Bars Rock Sliders For Can-Am Maverick R

ZP-YJ-030606-018

SAUTVS®

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

## IMPORTANT



This NERF BARS ROCK SLIDERS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Assemble Part L1 and part L2 using 2 M8\*50 hexagon socket head cap screws and 2 nuts M8 through casing A; Assemble parts L1 and L2 into L side bumper using 2 M8\*45 hexagon socket head cap screws and 2 nuts of M8 through casing B. Do not tighten the screws for the time being.

(R side bumper similar assembly method)

3. Remove the seat, the front end with two M10 \* 80 hexagonal screws, 2 castings, and the rear end with M10 nuts with washers from the inside through the frame to connect with the side bumper in three positions.

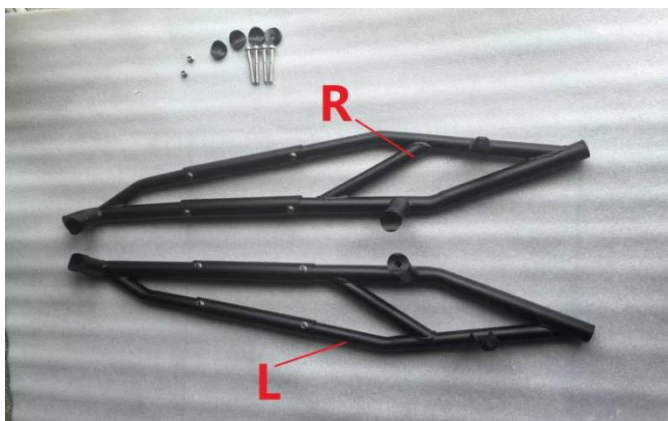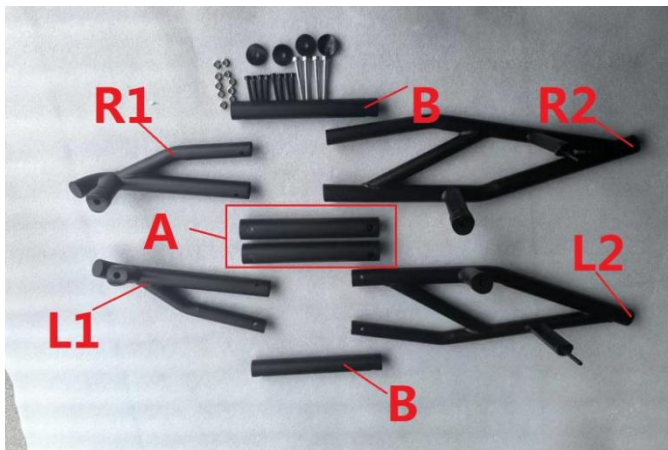

# Nerf Bars Rock Sliders For Can-Am Maverick R

ZP-YJ-030606-018

SAUTVS®

4. After tightening the 2 M10 screws at the front end and the M10 nut at the rear end, tighten all the connecting screws of the side bumpers, and the installation is completed.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

