

Sun Visors for Polaris Ranger XD 1500

ZP-YJ-030503-187



SAUTV^{VS}

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.


This *Sun Visor* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

PRODUCT AND ACCESSORIES

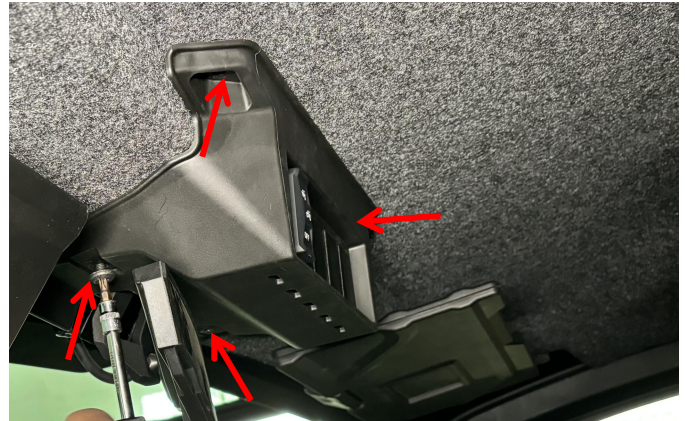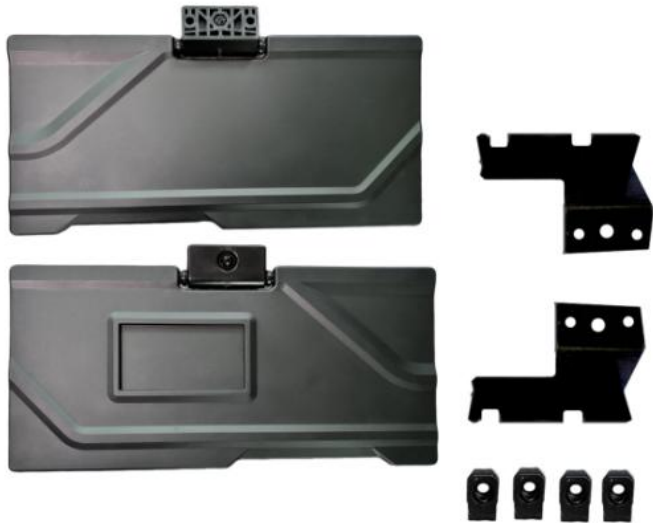

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Install the steel clips from the accessory pack onto the mounting bracket. Enter the cab and use tools to remove the overhead control box and disconnect the wire harness connector, then pry off the snap fasteners securing the roof liner at the A-pillar.

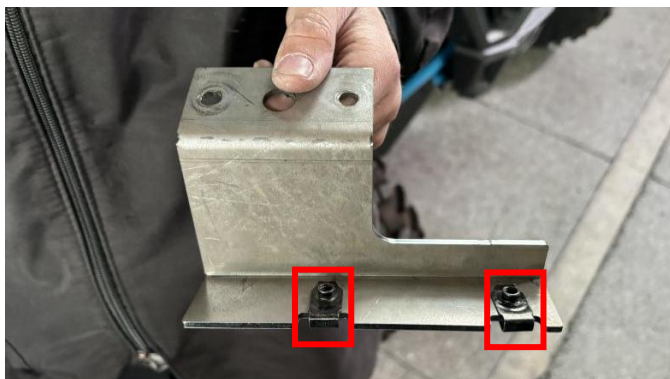

3. Peel back the roof liner and position the sun visor mounting bracket onto the vehicle frame (aligning the bracket's screw holes with the pre-drilled holes on the frame). Then secure

Sun Visors for Polaris Ranger XD 1500

ZP-YJ-030503-187


SAUTV^{VS}

with provided hex head screws. Finally put down the roof liner and use a utility knife to cut a notch at the bracket location so that the bracket can be protruded through.



4. Attach the sun visor to the mounting brackets using provided screws and nuts. Adjust the sun visor's tension by tightening the screws (Repeat the same installation process

on the opposite side). Finally, reinstall the roof liner and secure the overhead control box.

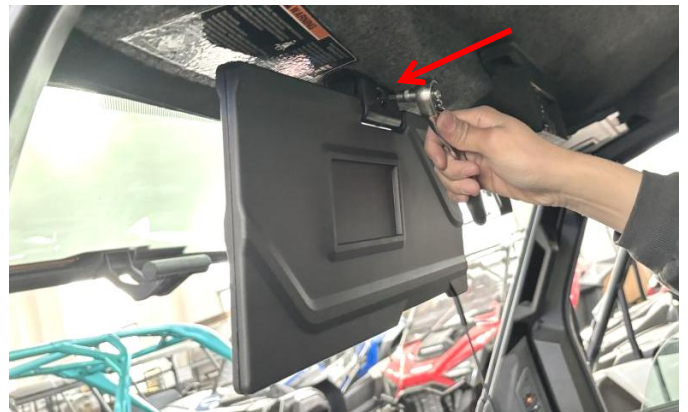

5. The installation is complete.



Sun Visors for Polaris Ranger XD 1500

ZP-YJ-030503-187

SAUTV^{VS}



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.