

Sun Visors for Polaris Xpedition XP/XP 5/ADV/ADV 5 2024+ ZP-YJ-030503-188



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

These *Sun Visors* are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.



INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK".
Turn key to "OFF" position and remove from vehicle.

Product picture and accessories



1. Assemble the sun visor and the mounting bracket together by using the matching screws. Then, get into the driver's cab and remove the screws that fix the roof lining. As shown in the picture:

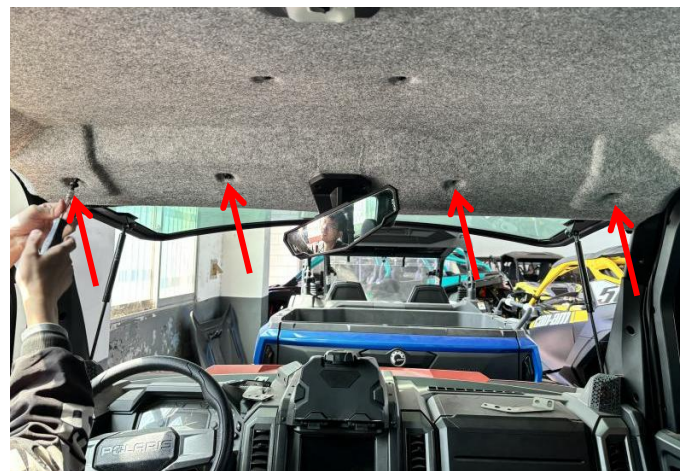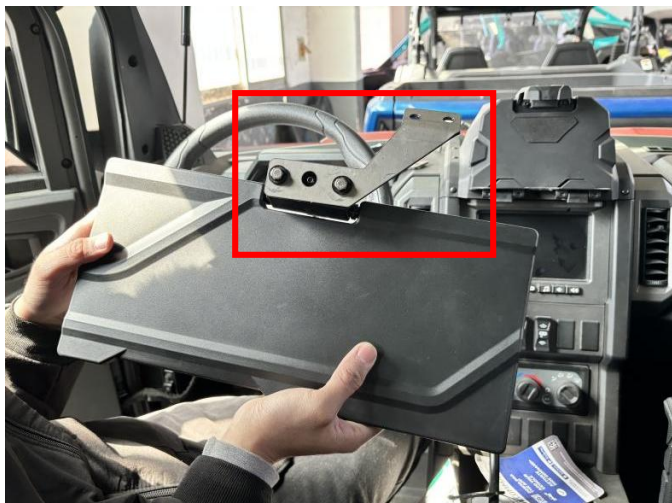

2. Lift up the roof lining, find the screws reserved for fixing the sun visor on the original vehicle. After loosening the nuts, install the sun visor bracket onto the screws, and then screw the original nuts back in place (install the other side in the same way). As shown in the picture:



Sun Visors for Polaris Xpedition XP/XP
5/ADV/ADV 5 2024+
ZP-YJ-030503-188



4.The installation is complete.



3. After the installation is completed, you can reinstall the roof lining and tighten the fixing screws. Finally, adjust the tightness of the sun visor by adjusting the screws. As shown in the picture:



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.