

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The *Hood Scoop* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture




1. First, remove the original vehicle hood and install the fixing wrenches and rubber plugs on both sides onto the new hood. As the picture shows:

Note: If it is difficult to remove the original hood, you can try to find the hood latch from the bottom of the hood and push it inward to make the hood easier to remove.



Hood Scoop for Kawasaki Teryx KRX 1000

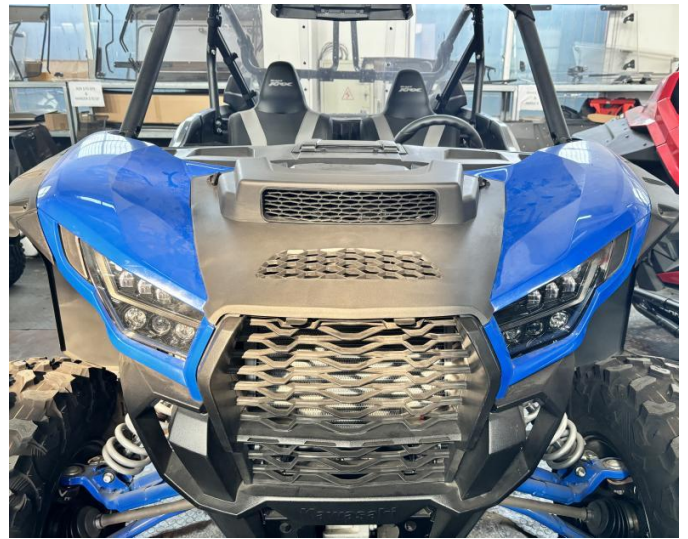

2. Install the new hood scoop onto the vehicle and tighten the locking buckle. As the picture shows:

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.



3. Installation completed!