### A-Pillar LED Pod Lights for Honda Talon

ZP-YJ-030902-014



#### **BEFORE YOU BEGIN**

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

These A-Pillar LED Pod Lights are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


#### INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product and accessories picture:



1. First, distinguish the left and right sides of the mounting bracket for the spotlight (place the bracket at the original A-pillar and determine the left and right sides by comparison), after which use the matching screws and nuts to fix the bracket on the spotlight. As shown in picture:

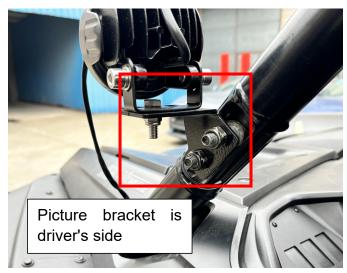



2. Unscrew the two fixing nuts at the A-pillar of the original vehicle, and add one aluminum lining tube for the spotlight on each of the two screws. Then install the spotlight bracket, adjust the angle of the spotlight, and use the original vehicle nuts to lock it. As shown in picture:

## A-Pillar LED Pod Lights for Honda Talon

ZP-YJ-030902-014









3. Open the original hood, pull the wiring harness of the spotlight through the gap of the vehicle to the original headlight, and

disconnect the original headlight harness, then reconnect the harness of the spotlight to its counterpart, and finally use a tie to fix the loose harness before installing it back to the hood (the other side can be installed in the same way). As shown in picture:







# A-Pillar LED Pod Lights for Honda Talon

### ZP-YJ-030902-014



#### 4. Installation completed!





**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.