

#### **BEFORE YOU BEGIN**

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

### **IMPORTANT**

This ADJUSTABLE TABLET PHONE DEVICE HOLDER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

#### INSTALLATION INSTRUCTIONS

- 1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
- 2. Product image.



3. First, remove the cover of the passenger side storage box. Then, install the navigation bracket on the storage box and secure it using the vehicle's original screws and the screws provided with the product.








# Adjustable Device Holder for Can-Am Maverick R

## ZP-YJ-030603-200



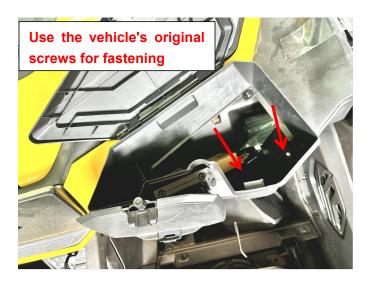



4. Adjust the desired spacing by rotating the handle of the mobile phone holder.



5. Installation complete.





**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.