

Stainless Steel Shifter Plate for Can-Am Commander / Maverick Trail

ZP-YJ-030603-203

SAUTV^{VS}

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This GLOSS STAINLESS STEEL SHIFTER PLATE KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.

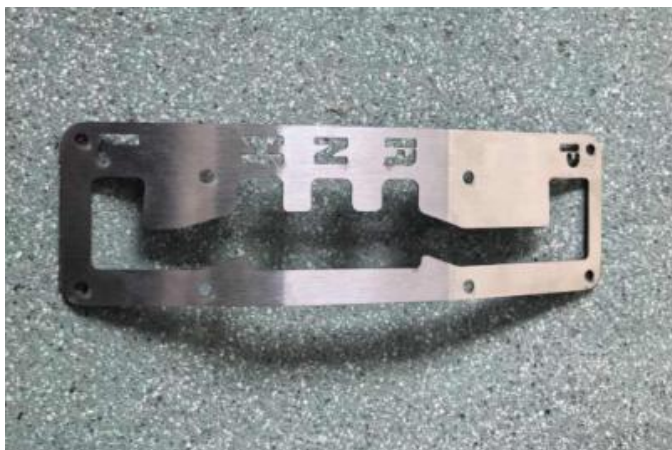

3. Unscrew the shift lever head and use eight M4*10 self-tapping screws to secure the stainless steel panel to the vehicle's original plastic panel. Tighten the screws and ensure that the panel is flat and flush. Installation complete.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.