

# Combined Front Fender Flares for Honda Pioneer 700

SAUTVS

ZP-YJ-030910-010

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *combined front fender flare* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## PRODUCT



## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. First, assemble the fender flares together. Use M3 self-tapping screws to fix the holes on the side, and then use M6 screws and nuts to fix the other holes. As shown in the figure:



3. Pry out the two pins on the vehicle. Place the assembled fender flare on the vehicle, and then press the pins that were just pried out back into their original positions to fix the fender flare. As shown in the figure:






# Combined Front Fender Flares for Honda Pioneer 700

SAUTV5

ZP-YJ-030910-010

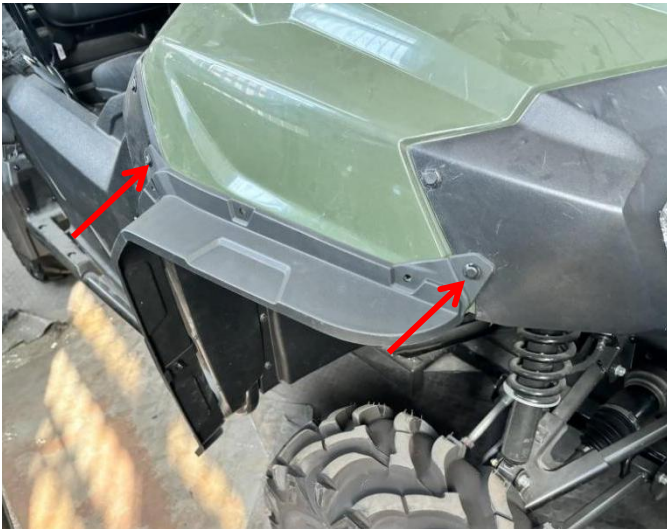

4. Prepare a 6mm drill bit. Drill holes along the fixing holes on the fender flare at the corresponding positions on the vehicle (only two fixed holes need to be drilled). Then, use the matching M6 screws, nuts and M4 self-tapping screws to fix them (install the other side in the same way). As shown in the figure:

5. The installation is complete.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.