

Black Aluminum Intake Cover Grills for Polaris RZR XP 1000/XP 4 1000 2024+



ZP-YJ-030503-192

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


IMPORTANT

The *Intake Cover Grills* are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK".
Turn key to "OFF" position and remove from vehicle.

Product picture

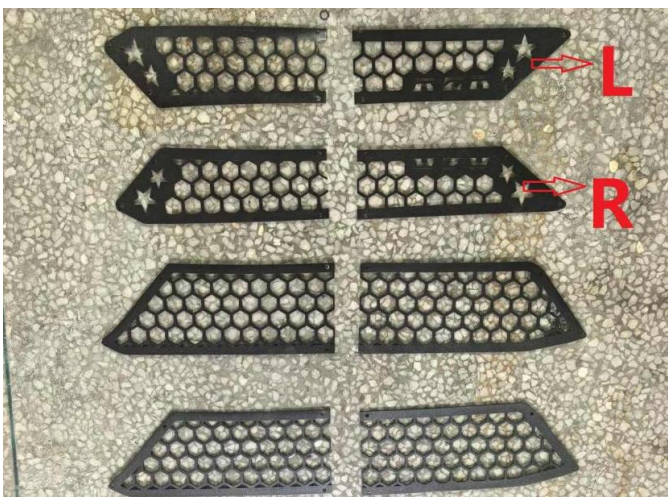

1. Fix the outer intake cover (with letters) to the outer frame of the intake filter with 4 self-tapping screws of 4*12, as shown in the picture:



2. Install the other end onto the outer frame with 4 self-tapping screws of 4*12, and ensure the connection positions are aligned neatly, as shown in the picture:



3. Install the inner intake cover onto the outer frame of the inner filter with 4 self-tapping screws of 4*12, as shown in the picture:



Black Aluminum Intake Cover Grills for Polaris RZR XP 1000/XP 4 1000 2024+



ZP-YJ-030503-192

4. Install the other end onto the outer frame with 4 self-tapping screws of 4*12, ensuring the connection positions are aligned neatly.



5. Install the other side in the same way, and then the installation is completed.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.