

# Fender Flares for Can-Am Outlander 500

SAUTV5

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *fender flare* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## PRODUCT



## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Assemble the split front and rear fender flares into complete units using the included self-tapping screws.




3. First, position the front fender flare in place on the vehicle. Then, using an M5 drill bit to drill holes in the vehicle body corresponding to the screw holes on the fender flare. Finally, secure it in place using the provided screws and nuts,



# Fender Flares for Can-Am Outlander 500

as shown in the figure.

NOTE: When drilling, you may first select and drill two of the holes, then temporarily secure the fender flares with screws and nuts before drilling the remaining holes. This helps prevent misalignment.

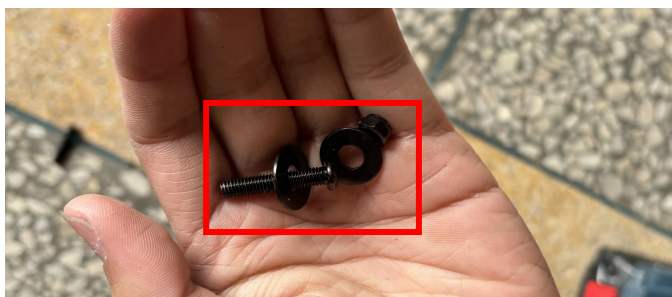

4. The rear fender flare can be installed following the same method as the front fender flare. First, position it in place on the vehicle. Then, using an M5 drill bit to drill holes in the vehicle body according to the screw holes on the fender flare. Finally, secure it with the

provided screws and nuts. As shown in the figure.

NOTE: As with the front fender flare, start by drilling and fastening just two screw holes first, then proceed with the remaining ones to ensure proper alignment.




5. Finally, attach the rear mudguard by aligning it with the rear fender flare. First, secure it temporarily using the self-tapping screws. Then, using an M5 drill bit to drill holes in the vehicle body corresponding to the mounting holes on the mudguard. Complete the installation by fastening with screws and nuts for reinforcement. (The opposite side's front and rear fender flares can be installed following the same procedure.)




# Fender Flares for Can-Am Outlander 500

SAUTV5

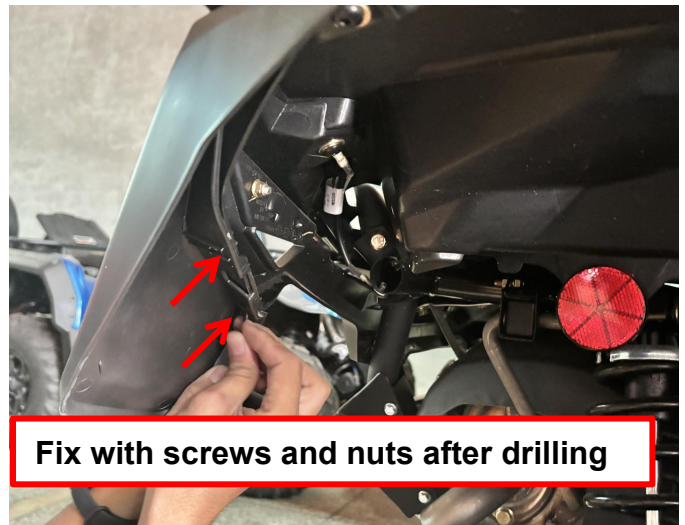

6. The installation is complete.

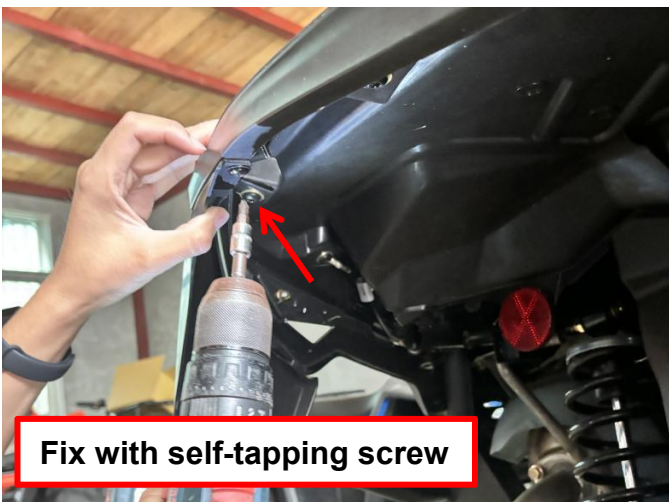

**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.