

# Rear bumper for Polaris Sportsman 500

ZP-YJ-030506-043


SAUTVS®

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *Rear Bumper* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## PRODUCT

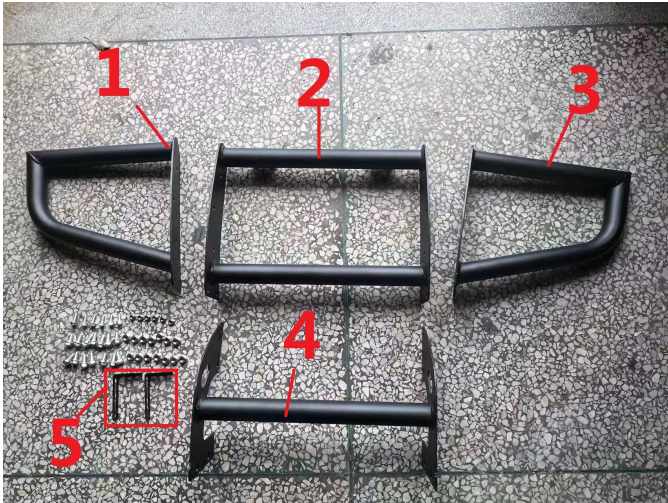

3. Install the two brackets (Part 5) onto the front bumper with six M6\*16 flange hexagon socket screws and M6 nuts.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.  
2. Combine Part 1, Part 2, Part 3 and Part 4 with ten M8\*20 flange hexagon socket screws, as shown in the figure:



4. Use four M8\*20 flange hexagon socket screws and four M8 anti-loosening nuts to install the front bumper to both ends of the front frame, as shown in the figure. Tighten the screws and the installation is complete.

# Rear bumper for Polaris Sportsman 500

ZP-YJ-030506-043

SAUTV<sup>VS</sup>



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.