Rear Cargo Storage Box for CFMOTO UFORCE 1000

ZP-YJ-031208-005



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *Rear Cargo Storage Box* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

PRODUCT



INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

2. Use the screws and nuts provided with the package to fix the rectangular inner storage box into the outer storage box. As shown in the picture:





3. Insert the assembled storage box into the slots on the side rail of the rear cargo, then secure the storage box to the vehicle by twisting the two knobs inside the box. Finally, place the long storage compartment in the corresponding position of the storage box. As shown in the figure:

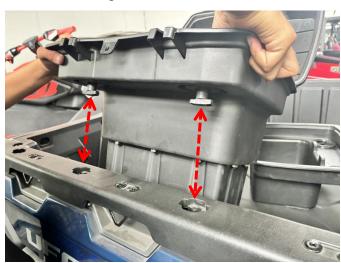

Rear Cargo Storage Box for CFMOTO UFORCE 1000


ZP-YJ-031208-005









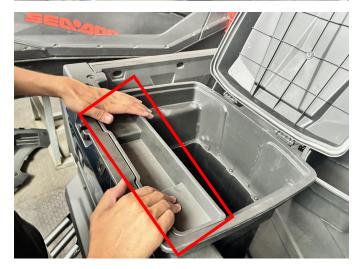

4. The installation is complete.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.