

Front Door 6.5 Inch Speaker Pods for Polaris RZR PRO 2025+



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The *Door Speaker Pods* are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture(Speakers are not included)




1. First, remove the outer frame of the speaker pod. Then, place the self-prepared speaker onto the pod and secure it using the self-tapping screws provided with the product. After that, reattach the outer frame to its original position (the wiring harness for the speaker needs to be connected by yourself). As shown in the picture:

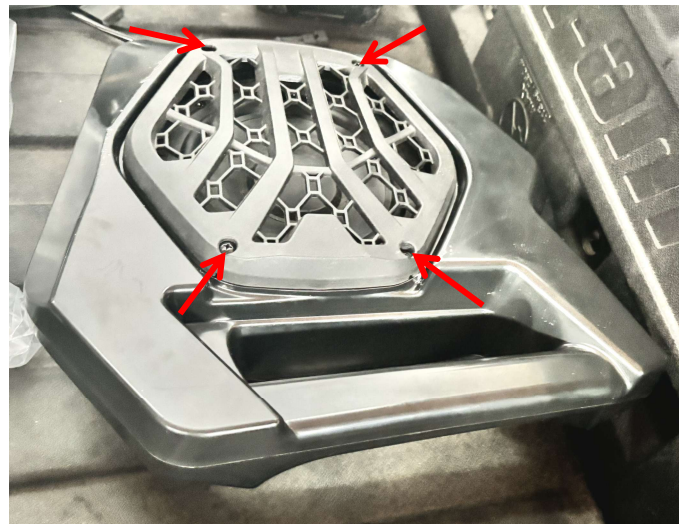


2. Open the original vehicle's driver door, remove the screws and snap fasteners securing the outer door trim panel, and then detach the outer door trim panel. As shown in the picture:

Front Door 6.5 Inch Speaker Pods for Polaris RZR PRO 2025+

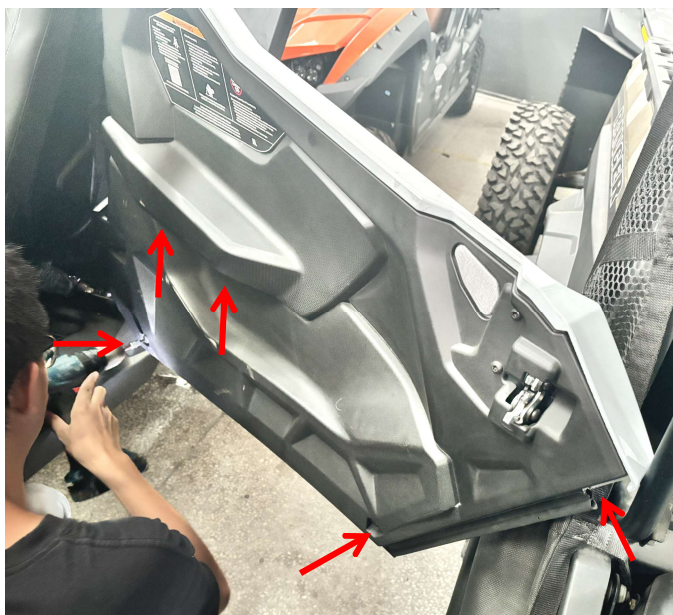


3. Prepare a 6MM drill bit, and drill holes sequentially at the pre-marked points on the original door panel. Then, install the assembled speaker pod on the inner side of the door panel, and secure it with the provided screws from the outer side of the door panel. Finally, reattach the outer door trim panel to its original position. (Install the speaker pod on the other side using the same method.) As shown in the picture:

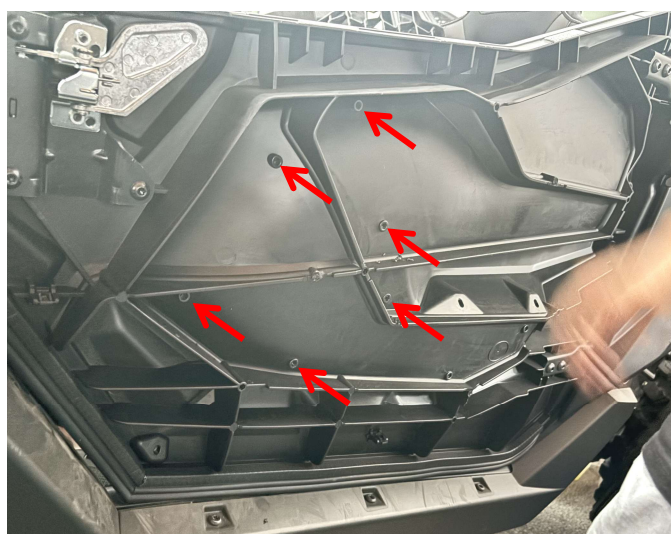

Front Door 6.5 Inch Speaker Pods for Polaris RZR PRO 2025+



4. The installation is complete.

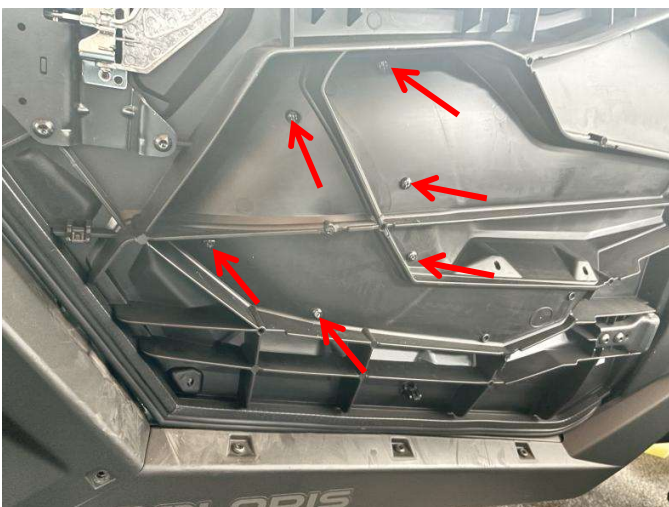

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.