

Turbo Hood Scoop with LED Spot Light for Polaris General 1000



ZP-YJ-030503-9136

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The *Turbo Hood Scoop with LED Spot Light* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture



1. First remove the original hood scoop, replace and install the new inner hood, secure it with M5*20 and M6*19 self-tapping screws and washers, and then reattach the hood to the vehicle. As the picture shows:

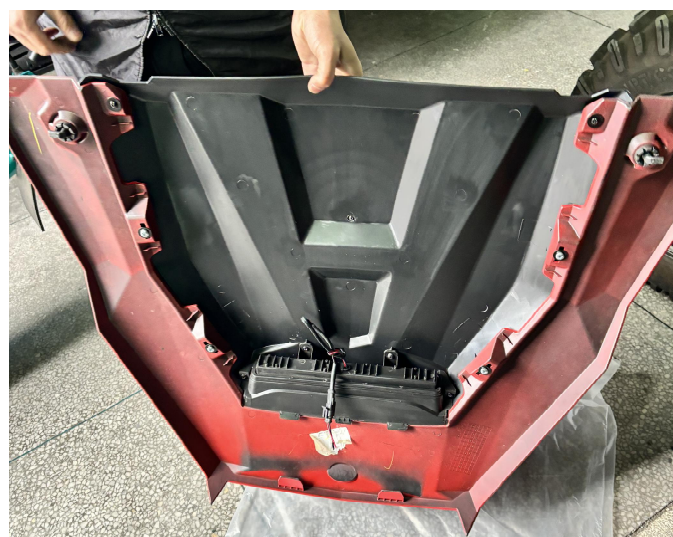


2. Prepare the extension cable that comes with the product, cut the white extension cable into two cables of equal length, connect them to the wiring harness of the hood-mounted spotlight (connect the red wire to one extension cable and the black wire to another extension cable, and ensure proper insulation at the connection points). Then, route the two

Turbo Hood Scoop with LED Spot Light for Polaris General 1000


SAUTV5

ZP-YJ-030503-9136

extension cables to the vehicle's original power source, connecting them to the corresponding positive and negative terminals. Finally, reconnect the wiring harness plug-ins of the hood light properly and reattach the hood to the vehicle. As shown in the picture:

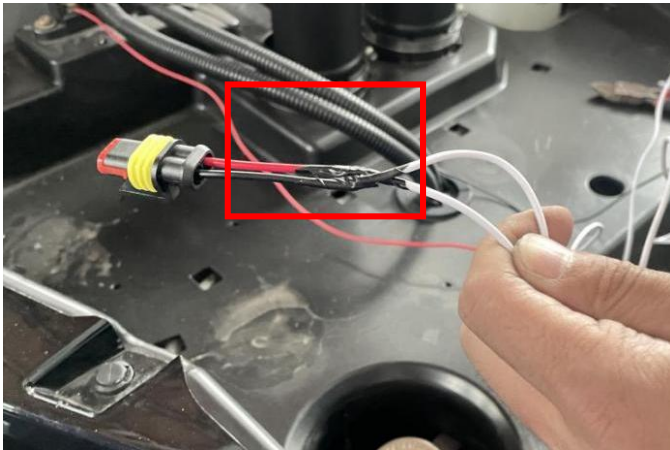

3. Installation is complete.

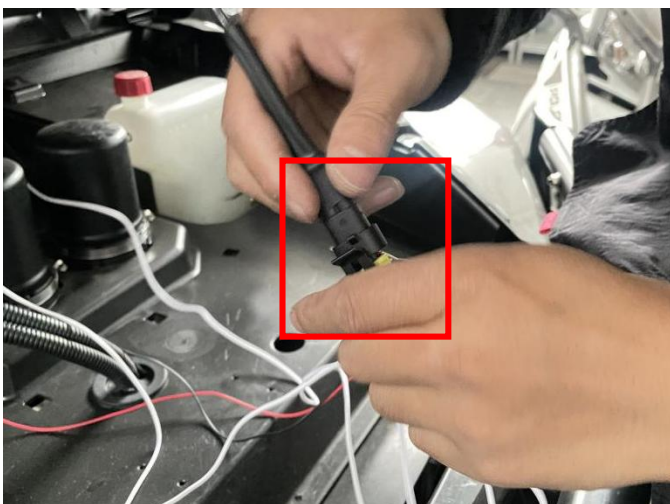

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.