

# Rear Mud Guards for Honda Talon 1000



ZP-YJ-030910-011

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

These Rear Mud Guards are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.


Product and accessories picture:



Driver's side mudguard:

1. First, place the mudguard on the original vehicle (the edge position should be aligned with the edge of the original fender flare to avoid deviation in subsequent drilling), then prepare a marker and mark it according to the fixed holes on the mudguard. After that, remove the mudguard and use an M8 drill bit to drill holes in the just marked positions one by one. Finally, install the mudguard on the vehicle and fix it with the product's matching snap fastener. As shown in the picture:



Note: When placing the mudguard, you need to snap the edge to the inside of the original fender flare

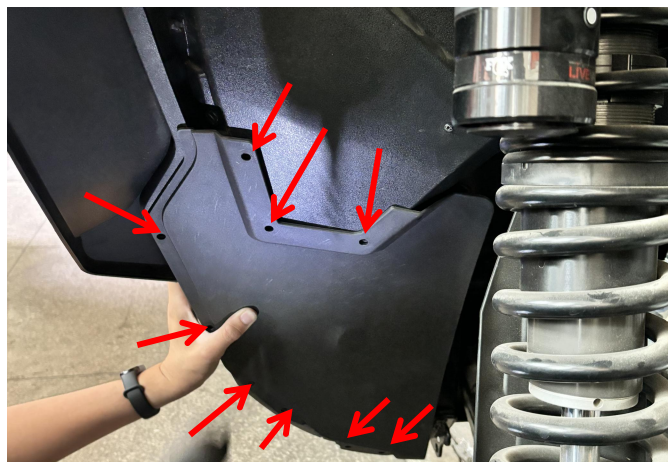

# Rear Mud Guards for Honda Talon 1000




ZP-YJ-030910-011

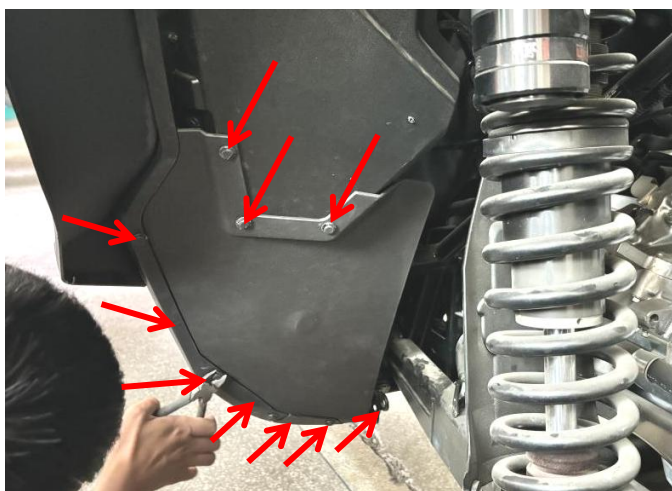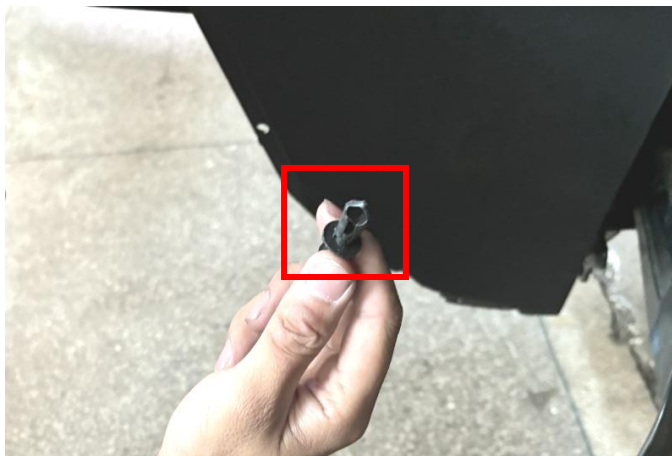

Passenger side mudguard:

2. The installation method of the mudguard on the passenger side is the same as that on the driver's side. First, place the mudguard on the original vehicle (the edge position should be aligned with the edge of the original fender flare to avoid deviation in subsequent drilling), then prepare a marking pen to mark according to the fixed holes on the mudguard. After that, remove the mudguard and use an M8 drill bit to drill holes in the positions just marked. Finally, install the mudguard on the vehicle and fix it with the product's matching snap fastener. As shown in the picture:

Note: When placing the mudguard, you need to snap the edge to the inside of the original fender flare

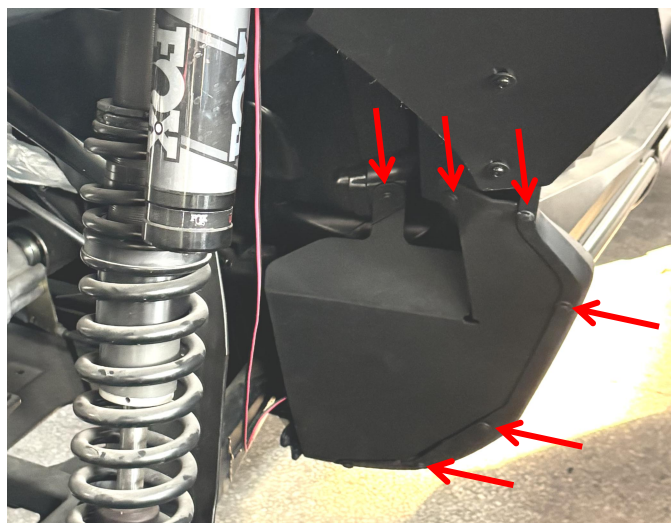

3. Installation completed!



## Rear Mud Guards for Honda Talon 1000



ZP-YJ-030910-011

---



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.