


## **BEFORE YOU BEGIN**

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *Inner Front Storage Basket* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## **PRODUCT**

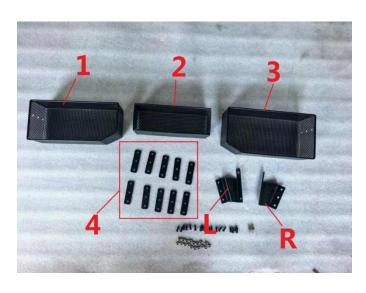



## INSTALLATION INSTRUCTIONS

- 1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
- 2. Assemble parts 1, 2, and 3 using 16 pieces of M6\*16 hex socket screws, 16 pieces of M6 lock nuts, and 8 pieces of iron brackets (part 4). Align them and then tighten the screws as shown in the figure.





3. Use 4 pieces of M6\*16 hex socket screws, 4 pieces of M6 lock nuts, and 2 pieces of iron brackets (part 4) to install the left mounting bracket and the right mounting bracket to both ends of the storage box respectively, do not tighten the screws, as shown in the figure.







4. Remove the two screws from the inside of the A-pillar of the vehicle, then use the removed screws to install the storage box onto the front pillar, and finally tighten the mounting bracket screws as shown in the illustration.





5. Secure the upper end of the mounting bracket to the front A-pillar with two self drilling screws, and the installation is complete.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.