

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

The Full Windshield is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product and accessories picture:

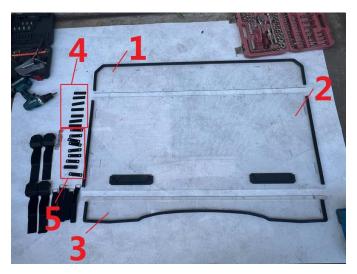

1. Assemble PC board 1, PC board 2 and PC board 3 with 16 M6*20 hexagonal screws, 16 M6 locknuts through 8 pressure plates 4 and 8 pressure plates 5. Pressure plate 4 is mounted on the outer of PC board. As shown in picture:



2. Use two small straps and four large straps to secure the front windshield to the front pillar, then use three small straps to secure the upper end of the front windshield to the front crossbeam, and complete the installation.





Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.