

# Combined Front Fascia for Polaris Sportsman 570


SAUTV<sup>VS</sup>

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *combined front fascia* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## PRODUCT

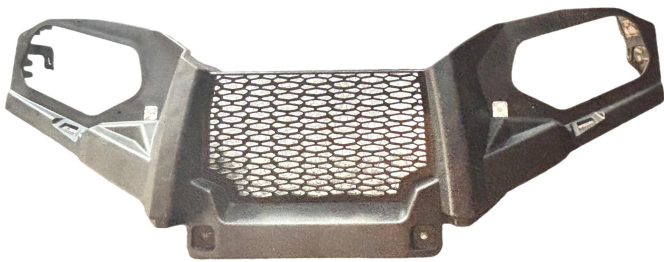

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. First, use the self-tapping screws included with the product to assemble the split front grille into a complete unit. As shown in the figure:




3. Open the front body rack cover of the vehicle and remove it. As shown in the figure:





# Combined Front Fascia for Polaris Sportsman 570

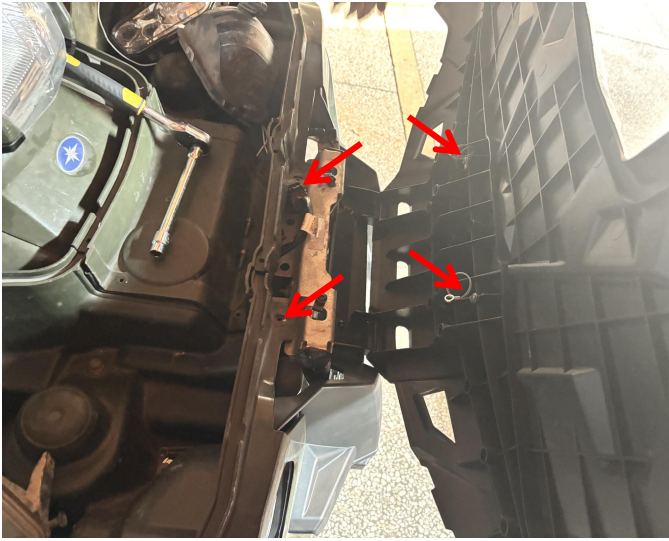

4. Remove the original front fascia and lower cover of the vehicle. As shown in the figure:



5. Remove the original headlights from the front fascia and transfer them to the new front fascia. The original metal clips must also be relocated to the new fascia in their original positions. Then, install the new front fascia back onto the vehicle. Finally, reattach the previously removed lower plate and storage box cover. As shown in the figure:





# Combined Front Fascia for Polaris Sportsman 570



6. The installation is complete.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.