

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

The Front Fender is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product and accessories picture:



1. Use the self tapping screws provided with the product to assemble the separated fender flares into a whole. As shown in picture:







2. First, pry out the two nylon buckles at the bottom of the front fender of the original vehicle. Then, place the assembled fender flares on the original vehicle and fix them with the self tapping screws provided with the product. Finally, replace the original nylon buckles with the extended nylon buckles

Front Fender for Kawasaki Mule 4010


ZP-YJ-031010-005



provided with the product for reinforcement. (Install the other side in the same way). As shown in picture:






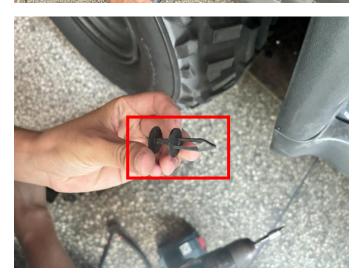



3. Installation completed!

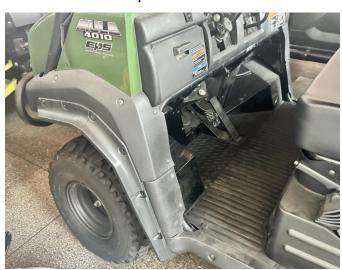

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.