

Front Fairing Trim for Can-Am Maverick R

ZP-YJ-030603-209

SAUTVS®

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This FRONT LEFT & RIGHT FAIRING TRIM KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. First, remove the vehicle's original hood.



4. Remove the rear protective cover from the vehicle headlight and disconnect the wiring harness connectors for the headlights and daytime running lights.





Front Fairing Trim for Can-Am Maverick R

SAUTV5

ZP-YJ-030603-209

5. Remove the vehicle's A-pillar trim panel, then detach the front fascia.

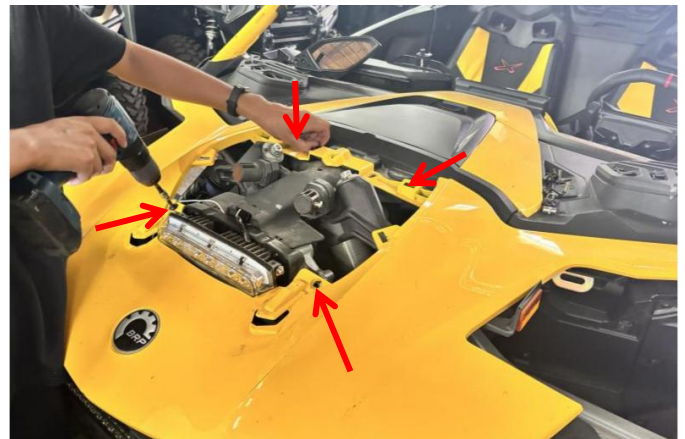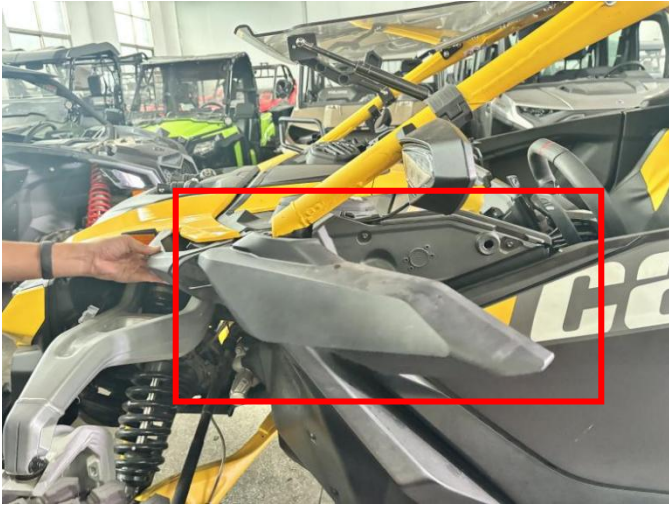


6. Remove the vehicle's daytime running light trim piece from the front fascia. Transfer the steel clips from the old trim piece to the new one in their original positions. Reinstall the new trim piece onto the vehicle and secure it using the original vehicle screws. (Repeat the same procedure for the opposite side.) Finally, reinstall the front fascia and other components onto the vehicle. (**Note:** Ensure the headlight and daytime running light wiring harnesses are reconnected properly.)

Front Fairing Trim for Can-Am Maverick R

ZP-YJ-030603-209

SAUTV5

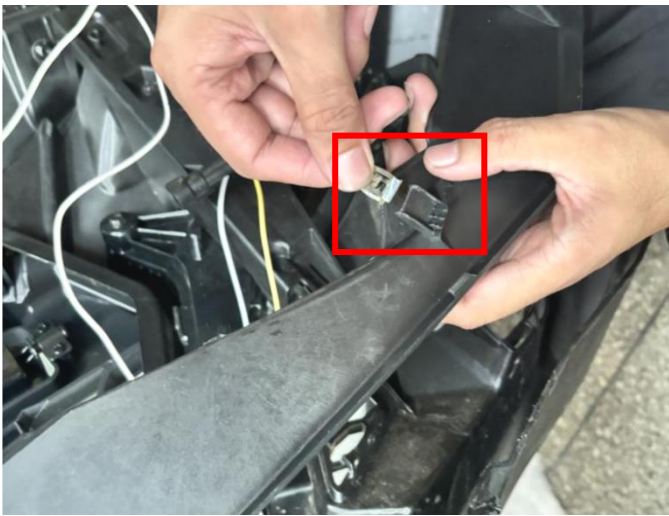

7. Installation complete.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.