

Left & Right Taillight Trim for Can-Am Maverick R

ZP-YJ-030603-207

SAUTV^{VS}

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT


This REAR LEFT & RIGHT TAILLIGHT TRIM KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. First, remove the taillight trim frame from the vehicle.

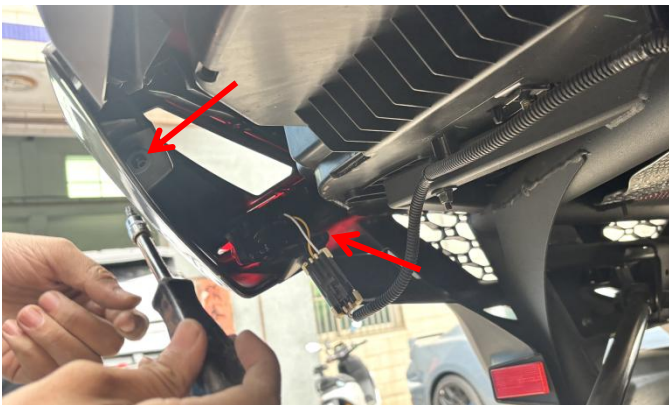

4. Remove the steel clips from the original trim panel and transfer them to the new trim panel. Then reinstall the new trim panel onto the vehicle and secure it using the original vehicle screws. (Replace and install the trim panel on the other side using the same procedure.)



Left & Right Taillight Trim for Can-Am Maverick R ZP-YJ-030603-207

SAUTVS®

5. Installation complete.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.