

### BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

The front bumper is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

### INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.


Product and accessories picture:



1. Use six M8\*45 hexagon socket head screws and six M8 lock nuts to assemble component 1, component 2 and component 3 through three sleeves 4. As shown in the picture:




2. Remove the six nuts at the bottom of the original frame (keep them for later use). Remove two sets of plastic snap fasteners and remove the iron parts. As shown in the picture:

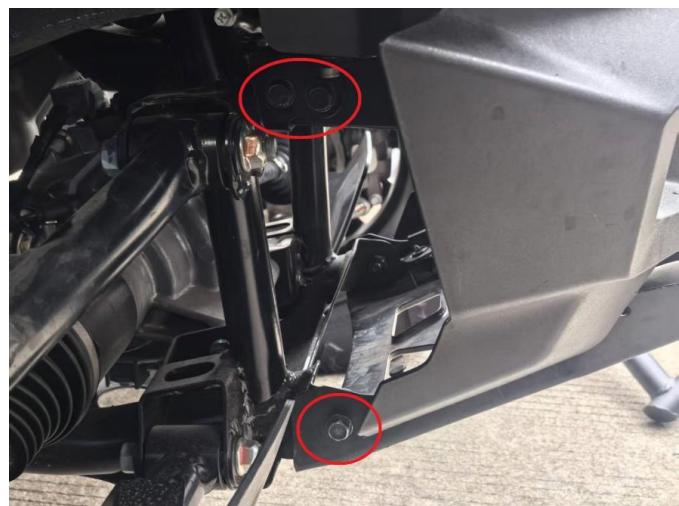

# Front Bumper for Honda Talon 1000

ZP-YJ-030906-006

**SAUTVS**®

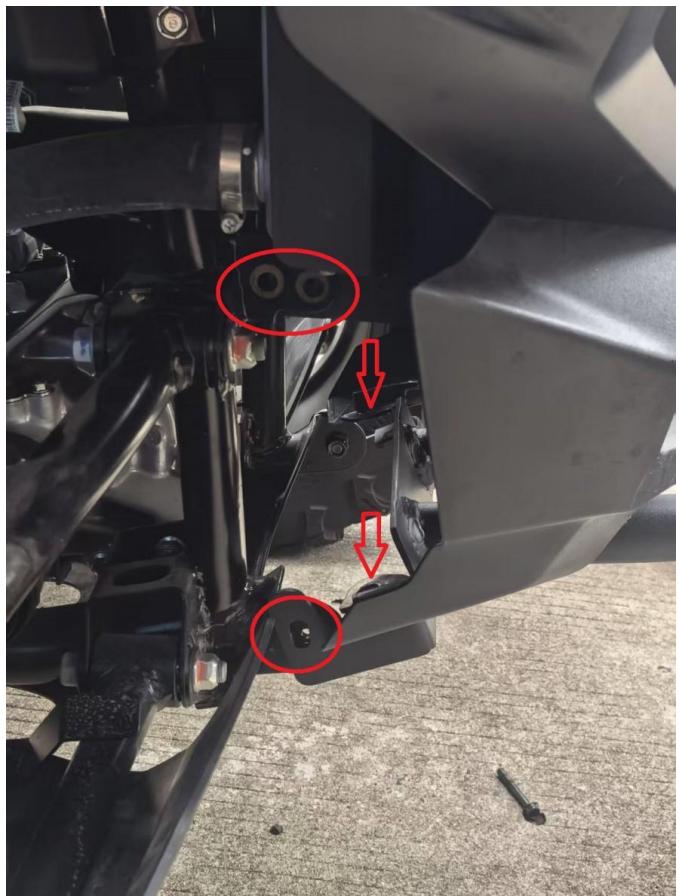

3. Fix the front bumper to the frame with the six screws that have just been removed, as shown in the picture. Use two M6\*20 hex screws, two M6 flange lock nuts and two M6 flat washers to fix the arrow position (the original plastic buckle position).

# Front Bumper for Honda Talon 1000

ZP-YJ-030906-006

**SAUTVS**®

4. After tightening all screws, the installation is complete.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.