

Front & Rear Headlight Pod Panel for Polaris Sportsman 570 2021+

YAP-030503-285

SAUTV5

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *Headlight Pod Panel* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

PRODUCT



INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. First, remove the vehicle dash panel bracket, then transfer all components (such as the cigarette lighter, keyhole, dashboard, plug cover, and plastic square clips) from the original panel frame to the new frame and bracket in their original positions. As shown:

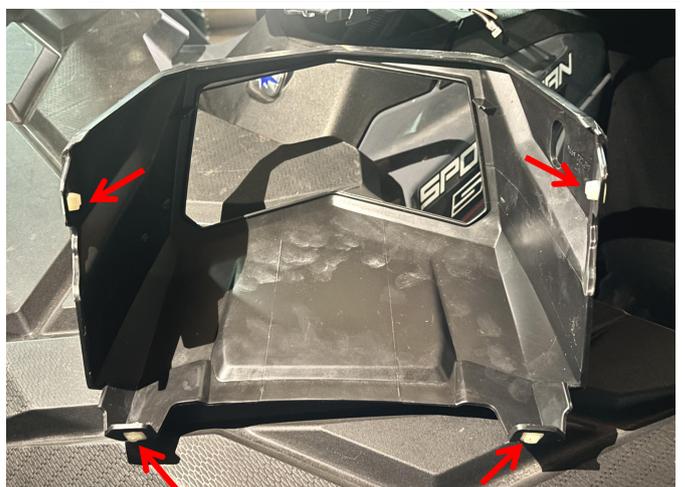

Front & Rear Headlight Pod Panel for Polaris Sportsman 570 2021+

YAP-030503-285

SAUTV5

3. After reconnecting the wiring harness plugs for the cigarette lighter, keyhole, and dashboard, install the new frame and bracket back onto the vehicle, securing them with the original screws. As shown:



4. The installation is complete.