

Upper & Lower Headlight Pod Panel for Polaris Sportsman 570 2006-2017

YAP-030503-284

SAUTV5

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *Headlight Pod Panel* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

PRODUCT



INSTALLATION INSTRUCTIONS




1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. First, remove the original dash frame bracket and headlight assembly from the vehicle. As shown:





Upper & Lower Headlight Pod Panel for Polaris Sportsman 570 2006-2017

YAP-030503-284

3. Remove the cigarette lighter from the base of the original dash bracket and relocate it to the new frame in the same position. Then install the new frame back into the vehicle, securing it with the original screws. Reconnect the cigarette lighter's wiring harness connector, and finally install the key onto the new base. As shown:

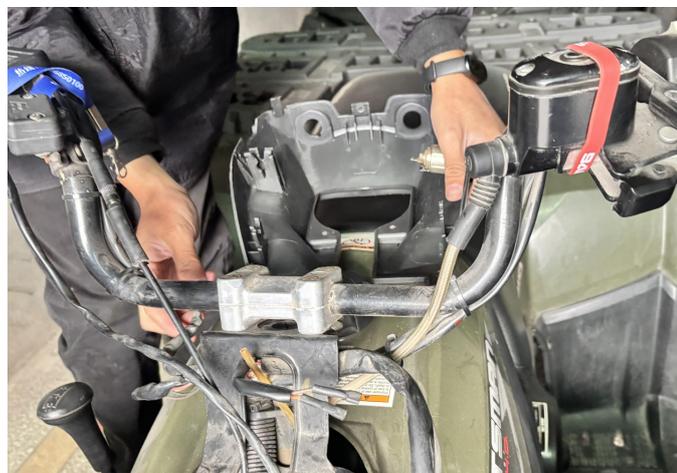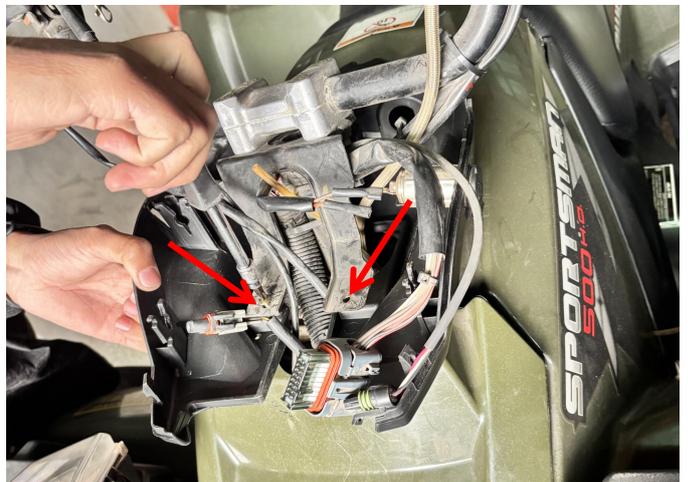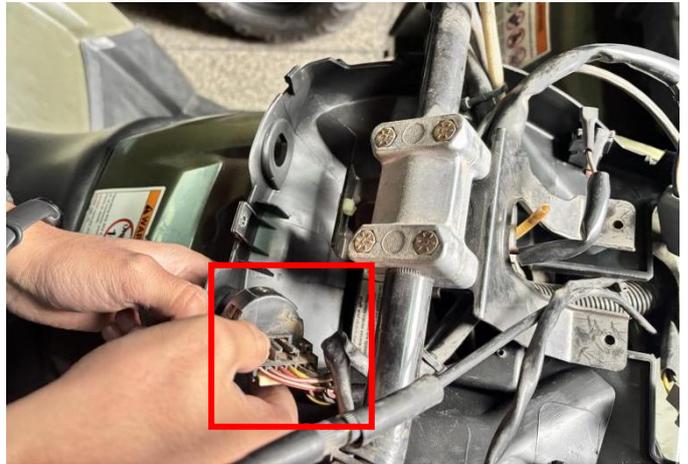

4. Reconnect the original headlight's wiring harness plug and reinstall it back onto the vehicle. Then, remove the dashboard from the original bracket and transfer it to the new bracket, reconnecting the wiring harness plug. Finally, secure it in place using the original screws. As shown:

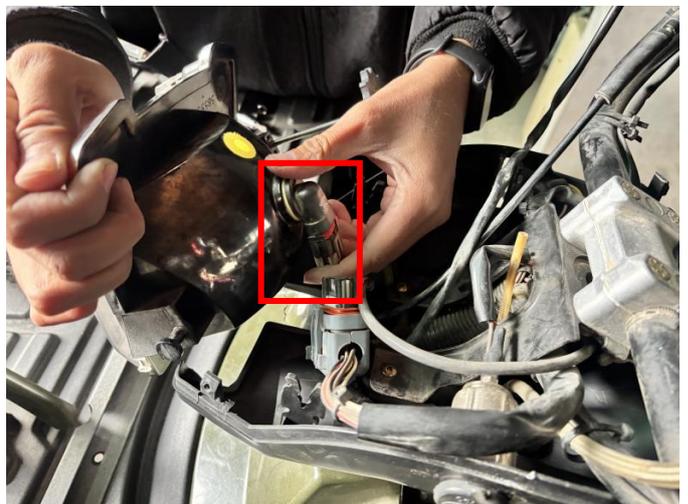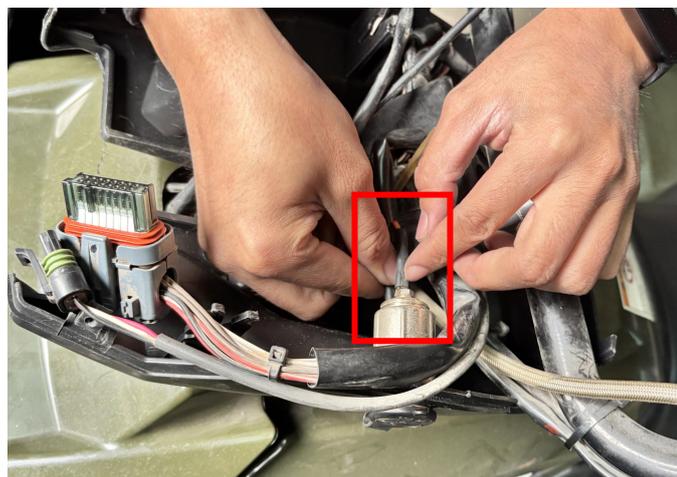

Upper & Lower Headlight Pod Panel for Polaris Sportsman 570 2006-2017

YAP-030503-284

SAUTV5



5. The installation is complete.