

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The *Front Fascia* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK".
Turn key to "OFF" position and remove from vehicle.

Product picture



1. First assemble the front fascia into a complete unit. As shown in the picture:

Note: Use M4x12 self-tapping screws when assembling the front fascia.



2. Remove the original hood and front fascia. As shown in the picture:






3. Remove the inner liner bracket and original headlights from the old front fascia, then transfer them to the new front fascia. After installation, mount the new front fascia back onto the vehicle and secure it using the original screws. As shown in the picture:



4. (For non-light front fascia, please skip this step) Prepare the matching adapter cable for the product. Connect the end with the round copper component to the vehicle's ACC terminal, and attach the other end to the wiring harness of the front fascia decorative lights. Then, turn on the vehicle's ignition to check if the front fascia decorative lights function

properly. Once confirmed, reinstall the previously removed screws and accessories back onto the vehicle. As shown in the picture:

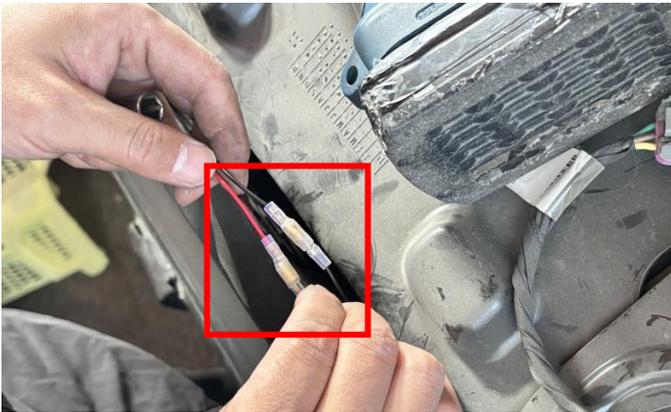

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

5. Installation is complete.