

A-pillar spotlight For CANAM X3

Start Installation

The spotlight kit is designed specifically for your vehicle, please read the installation instruction carefully before starting installation.

Installation Instruction

1. Product and Accessories



2. Remove the screws of the rear view mirror and fix the bracket under the rear view mirror. Install the spotlight at the front end of the bracket. As shown in the picture:



3. Remove the right side guard. Remove the screws on both sides and below (indicated by the red square frame). As shown in the picture:




A-pillar spotlight For CANAM X3



4. Open the protective plates on both sides and insert the spotlight harness through the gap under the protective plate. As shown in the picture:




5. Connect the wiring harness of the spotlights on both sides (match the same color) and fix them with zip ties. Pull out the right headlight plug and connect the conversion cable. As shown in the picture:

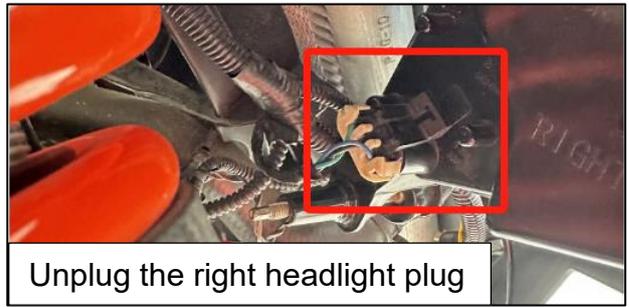

Unplug the right headlight plug



Connect the conversion cable

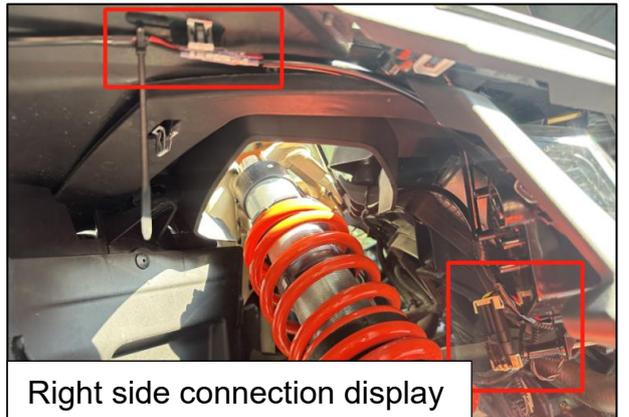

Right side connection display

6. Installation completed. Reinstall both sides protective panels.

7. Turn on the headlights high beam, and the spotlights will light up simultaneous. The yellow cover plate can be disassembled.

- The yellow cover plate is much helpful for rainy and foggy weather and can increase the penetrability of light.

