

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The *Front Fascia* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture



1. First assemble the front fascia into a complete unit. As shown in the picture:


Note: Use M4x8 and M4x12 self-tapping screws when assembling the front fascia.



2. Open the original hood, remove the pins at the connection points between the hood and the vehicle, then detach the hood. Refer to the picture:



Front Fascia for Polaris Ranger 570 Midsize

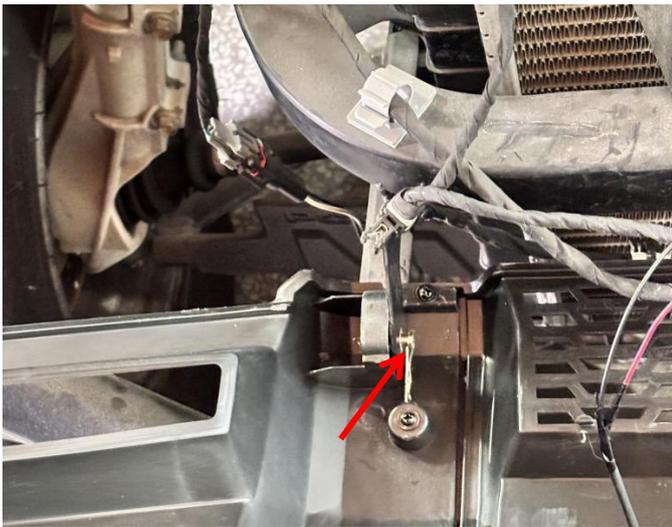

3. Remove the original front fascia from the hood, replace and install the new front fascia. The original headlights must also be relocated to the corresponding positions on the new front fascia. Refer to the picture:






4. Reinstall the front fascia hood back onto the vehicle, securing it with the original pins. (For non-light front fascia, please skip the following step) Then, prepare the matching adapter harness — connect one end to the vehicle's ACC terminal and the other end to the front fascia's decorative light wiring. After

Front Fascia for Polaris Ranger 570 Midsize



completion, turn the ignition key to check if the small decorative lights illuminate properly. Once confirmed, close the vehicle hood securely. Refer to the picture:

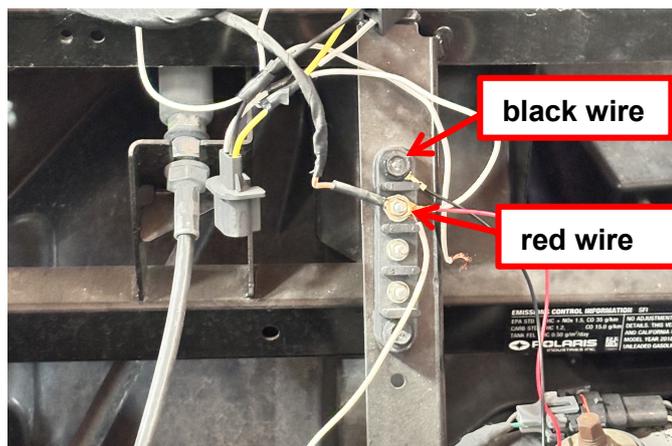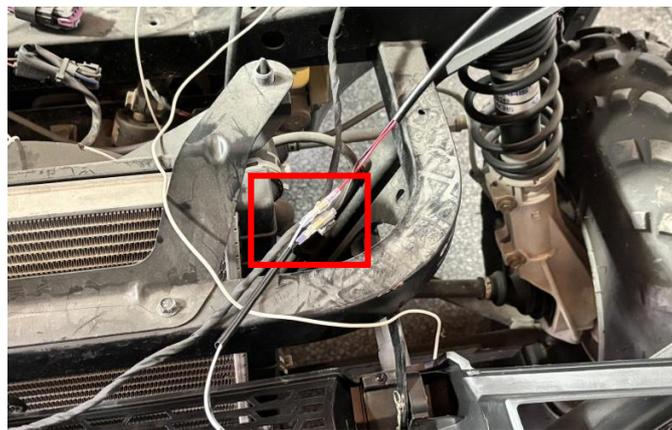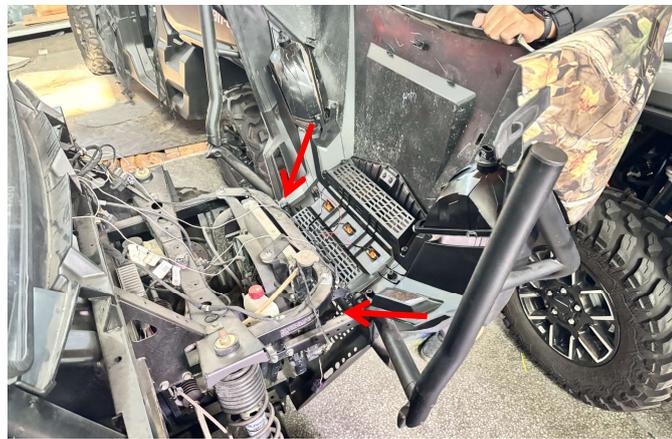

5. Installation complete!



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.