

# Bedside Cargo Molle Panels for Polaris XPEDITION ADV/ADV 5 2024+



YAP-030503-0276

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


## IMPORTANT

The *Cargo Molle Panels* are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK".  
Turn key to "OFF" position and remove from vehicle.

Product picture

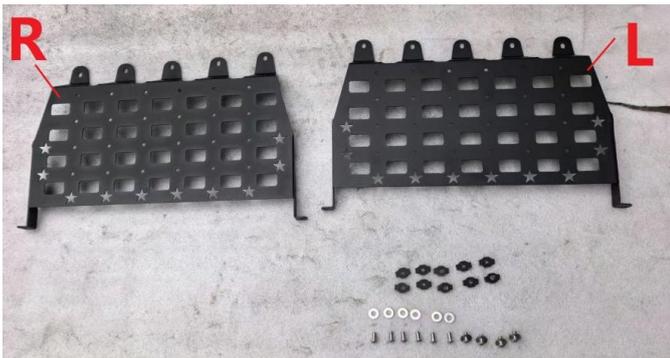

1. First, remove the 4 locking devices on both sides of the rear compartment and set them aside for later use.

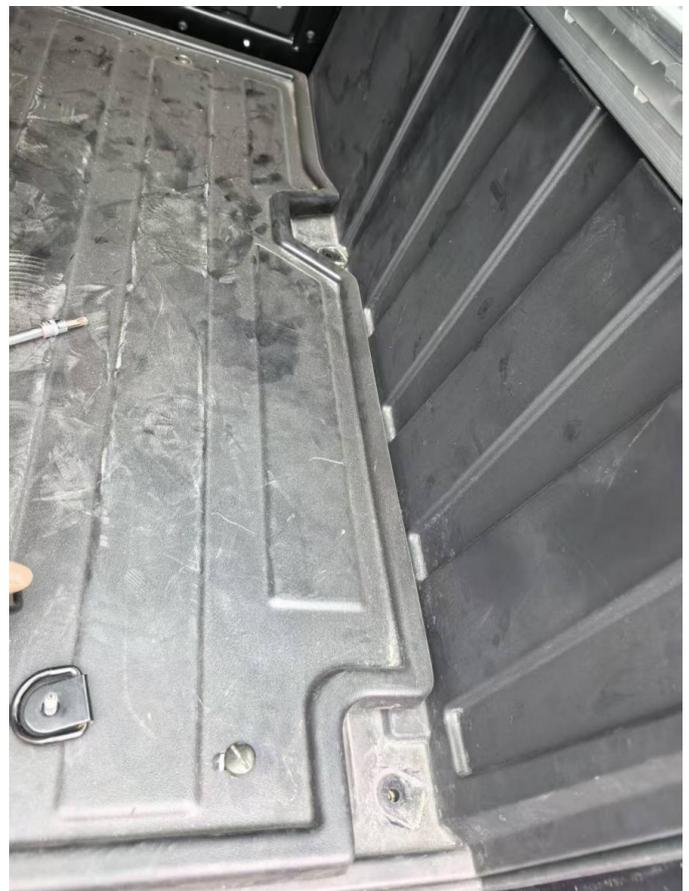

2. Use the 2 sets of locking devices just removed to secure the lower end of the molle panel to the compartment floor, as shown in the illustration.

# Bedside Cargo Molle Panels for Polaris XPEDITION ADV/ADV 5 2024+



YAP-030503-0276



3. Install 10 M8 nut blocks into the slots on both sides of the rear compartment, aligning them with the mounting holes on the molle panel. Then secure the molle panel to the M8 nut blocks using 10 M8x16 hex socket screws and 10 M8 flat washers. As shown in the illustration:



4. Tighten all screws to complete the installation.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.