

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT

The *Side Mirrors* are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture (Note: This product does not include spotlights.)





1. First, select the appropriate clamp liner based on the diameter of the vehicle's mounting pipe (liners come in 3 specifications with varying wall thicknesses: thinner liners for larger pipe diameters, thicker liners for smaller pipe diameters). See image:

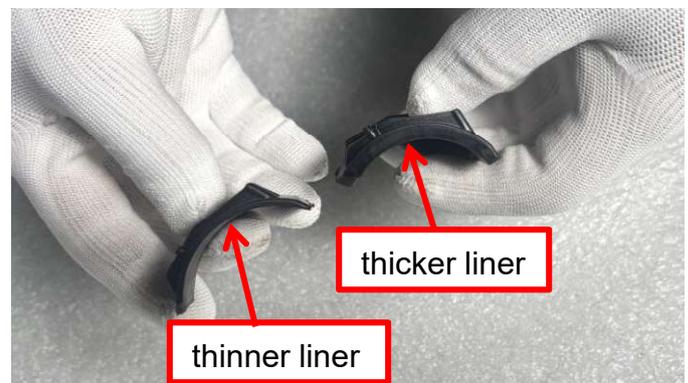

2. Place the appropriate liners into the clamps of the rearview mirror bracket, then secure the clamps onto the vehicle's original pipe (height adjustable as needed). Use a hex key H5 to tighten the matching screw M6X40. See image: **Note:** The liners have ribs on the back—long-rib liners go on the half clamp with the ball joint, while short-rib liners go on the half clamp with the mounting nut.



# UTV Aluminum Side Mirrors for Can-Am X3/Polaris RZR

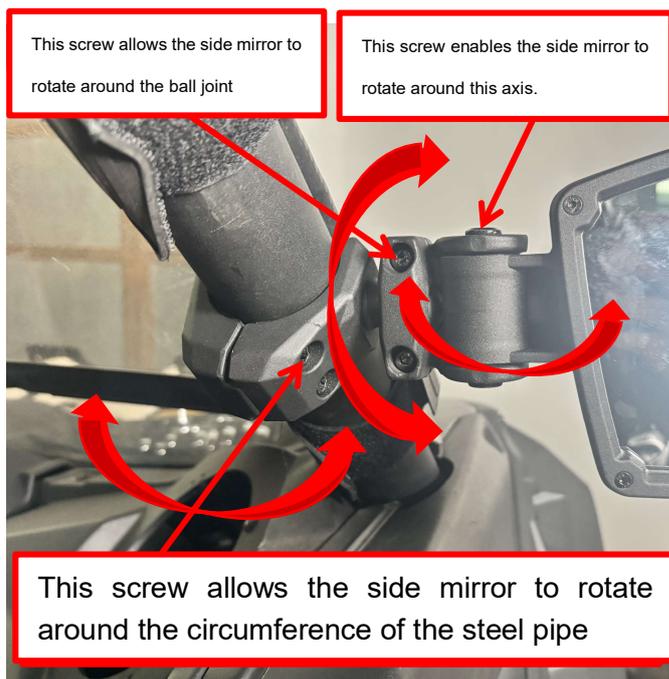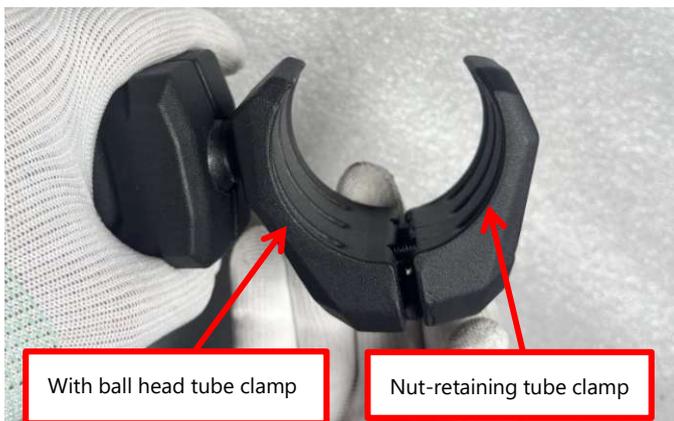

3. After adjusting the mirror angle, tighten its screws with a hex key H4. Install the other side in the same way. See image:



4. Installation complete.



5. Additional steps:


For owners who want to install spotlight, you may follow these steps. If not, you can skip this part.

The rearview mirrors come with a mounting bracket for spotlight. Simply use an H4 hex key to remove the screw connecting the mirror to the ball joint bracket. Then, pass the screw through the spotlight mounting bracket and re-tighten it. Finally, secure the spotlight onto the bracket. Refer to the image below:

# UTV Aluminum Side Mirrors for Can-Am X3/Polaris RZR



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

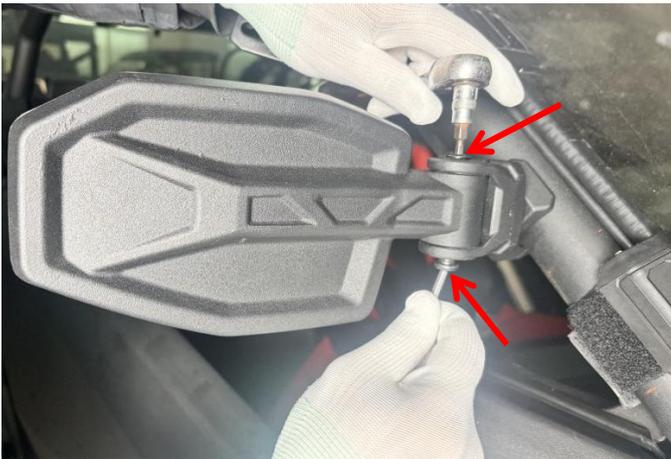

6. Installation complete.

