

Front Upper Bumper for Polaris Sportsman 570

SAUTV5

YAP-030503-0277


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This Front Upper Bumper is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

PRODUCT

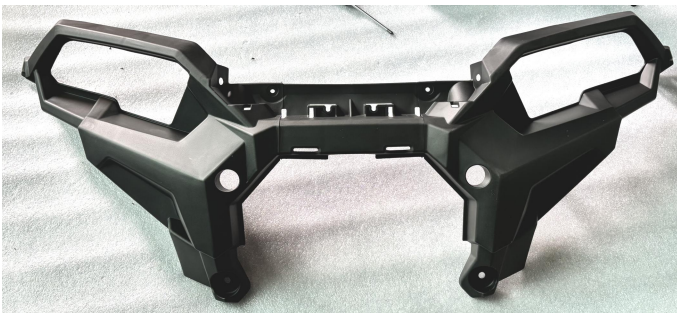

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. First open the front storage box cover, unscrew the fixing screws of the limit steel cable, then pry out the hinge pins to remove the storage cover. As shown:

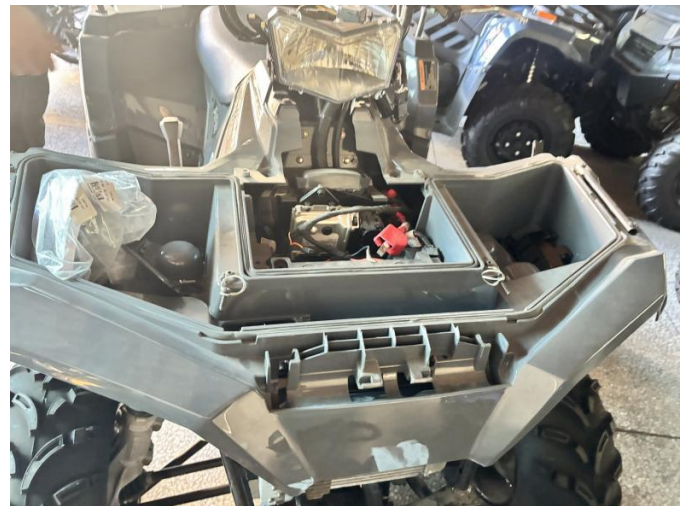

3. Open the seat cushion, remove the decorative panel beneath it, the fuel tank decorative panel, and the front storage box. Finally, detach the front fascia along with its lower panel and the grille. As shown:


Front Upper Bumper for Polaris Sportsman 570

YAP-030503-0277

SAUTV5




4. First, use the screws and flat washers included with the product to assemble the new front fascia into a complete unit. Then, remove the original headlights from the old front fascia and reinstall them as their original positions onto the new front fascia. As shown:

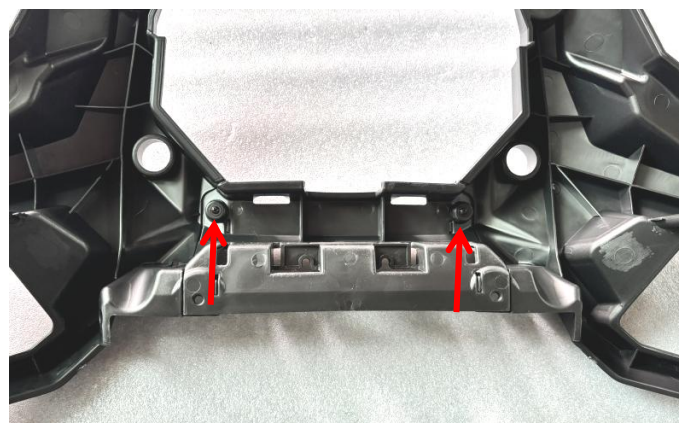

Front Upper Bumper for Polaris Sportsman 570


YAP-030503-0277

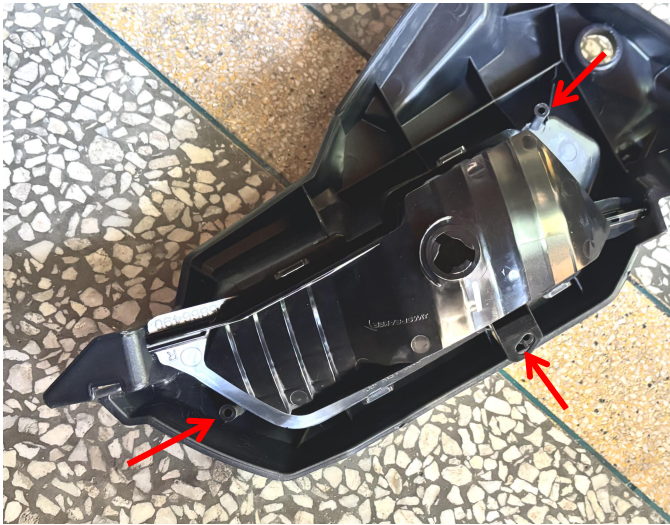

6. Finally, reinstall the previously removed storage box, cover panel, and other trim pieces back to their original positions, and reconnect the headlight wiring harness connector. As shown:




5. Install the new front fascia back onto the vehicle and secure it using the original screws, then reattach the lower panel of the front fascia. As shown:

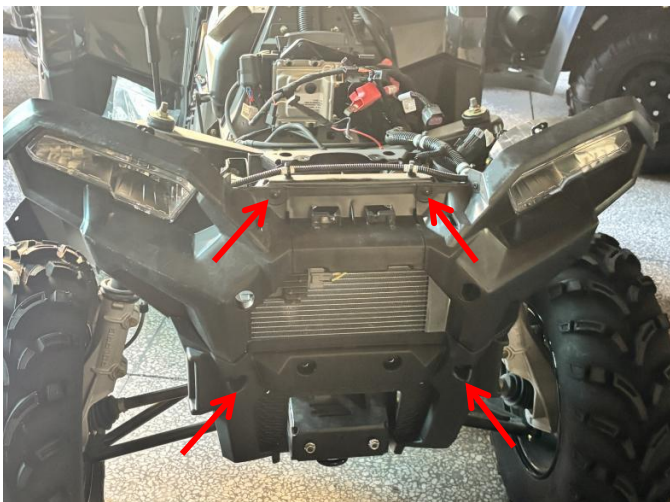

Front Upper Bumper for Polaris Sportsman 570

YAP-030503-0277

SAUTV5

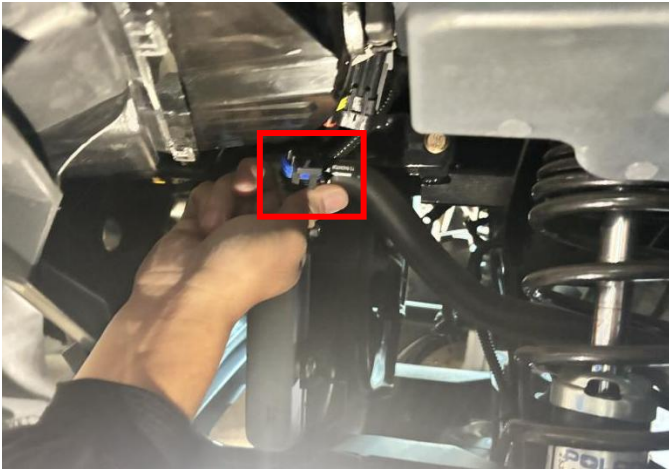

7. The installation is complete.

