

Bed Anchors Mounting for Can-Am Models

SAUTVS®

YAP-030603-273

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This BED ANCHORS MOUNTING KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. Remove the movable anchor points and insert them into the mounting holes on both sides of the vehicle's cargo bed.

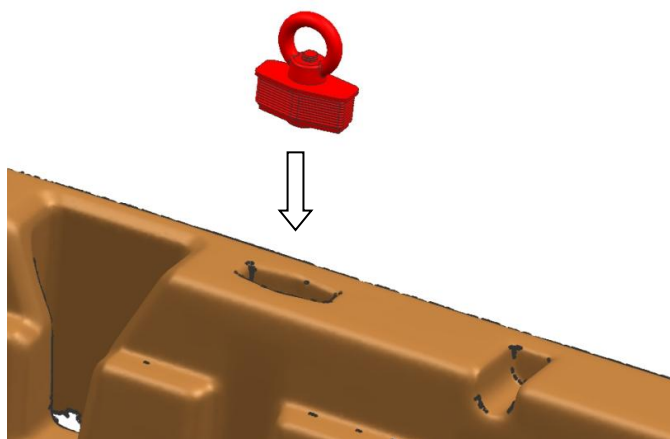

4. Turn the eye bolt on the anchor point clockwise to tighten it.

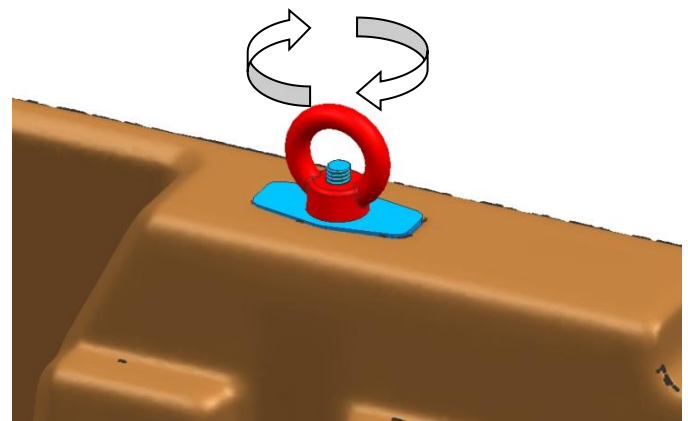

5. Secure the four movable anchor points in appropriate locations based on the actual situation. This will help secure the cargo. (The positions shown in the image on the right are for reference only.)

Installation complete

