

# LED Tail Lights for Can-Am Spyder RT

SAUTVS®

YAP-030601-015

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

## IMPORTANT

This LED TAIL LIGHTS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. Open the storage box lids on both sides of the vehicle, then remove the seat cushions and the rear seat cover.

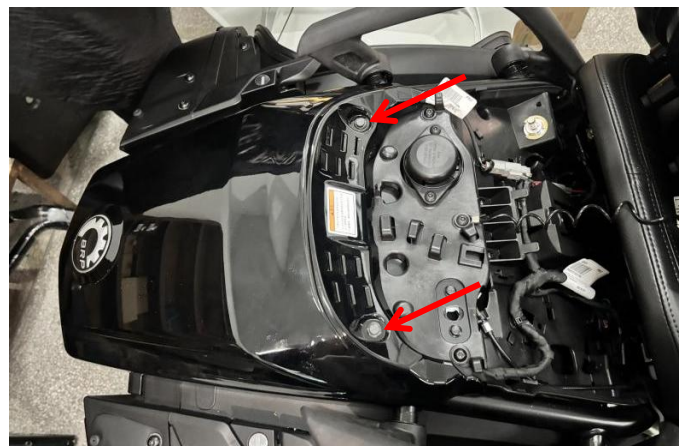



4. Remove the rear fender, license plate light, and license plate bracket from the vehicle, and disconnect the license plate light's wiring harness connector.

# LED Tail Lights for Can-Am Spyder RT

SAUTV5®

YAP-030601-015

5. Remove the taillight bracket and disconnect the vehicle's wiring harness connector.

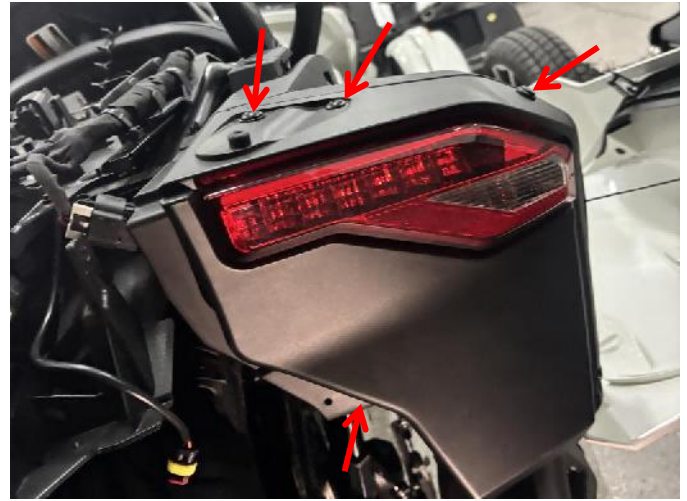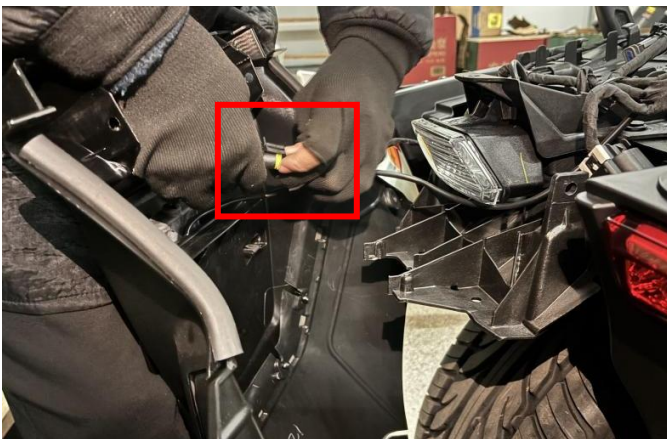

# LED Tail Lights for Can-Am Spyder RT

SAUTV<sup>5</sup>

YAP-030601-015

6. Remove the original taillight from the bracket and install the new taillight (be sure to transfer the steel clips from the original taillight to the new one in their original positions). Secure it using the vehicle's original screws, then reconnect the taillight wiring harness connector and reinstall the bracket with the new taillight onto the vehicle. Next, turn the ignition key to check if the new taillight is functioning properly. Once confirmed, reinstall the license plate light bracket and other accessories that were previously removed.



7. Installation complete.

