

# Handlebar Trim Cover for Can-Am Outlander 500

SAUTV5

YAP-030603-282


## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *handlebar trim cover* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

## PRODUCT

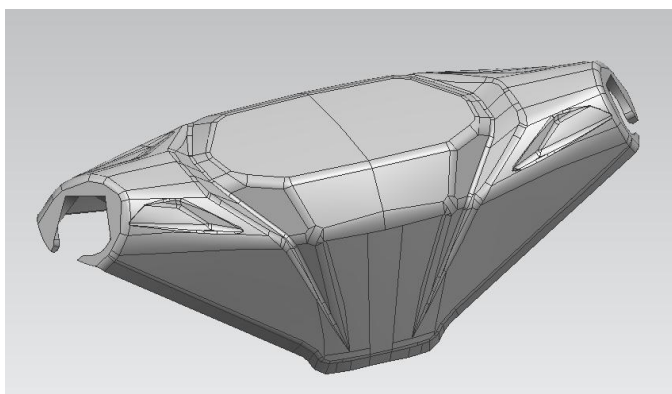

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove the original handlebar trim cover by prying it off, then install the new cover and press firmly downward. As shown:



3. The installation is complete.

