

LED Central Chase Light for Can-Am Maverick R

YAP-030602-081

SAUTVS®

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This LED CENTRAL CHASE LIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.



INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. If the vehicle is equipped with a roof, remove it first; if there is no roof, you can install the chase lights directly.

First, thread the flat washers and M6x70 screws through the two holes in the center of the rear frame (as shown in Figure A), and secure them to the steel clips on the rear housing (as shown in Figures B and C).

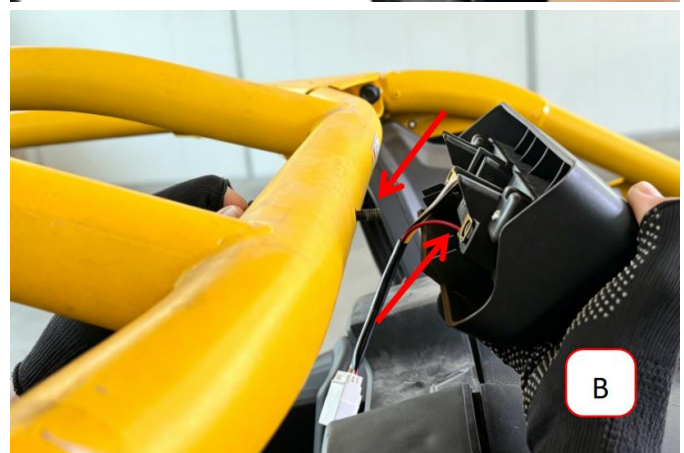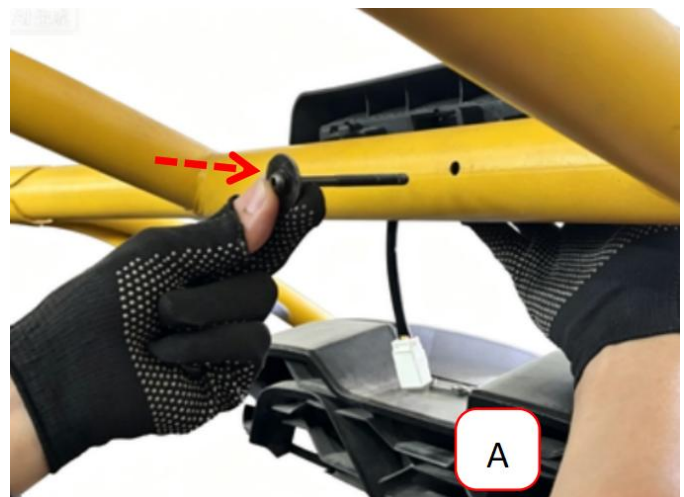

LED Central Chase Light for Can-Am Maverick R

YAP-030602-081

SAUTV5



4. Connect one end of the adapter cable from the accessory kit to the chase light harness connector (as shown in Figure D). Then, run the remaining adapter cable along the steel bar to the vehicle's taillight (as shown in Figure E). Disconnect the vehicle's taillight harness connector from the taillight, and reconnect it using the corresponding connector on the adapter cable (as shown in Figure F). Finally, secure the adapter cable to the frame using cable ties.



5. Installation complete.

