

Engine Access Panel with Cooling Fan for Can-Am Maverick X3 YAP-030603-287

SAUTV5®

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This ENGINE ACCESS PANEL WITH COOLING FAN KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. Remove the vehicle's access panel
Pull the access panel outward (red arrow in Figure A). After disengaging the latch behind the access panel, lift it upward (blue arrow in Figure A). Remove the vehicle's access panel (see Figure B).



Engine Access Panel with Cooling Fan for Can-Am

Maverick X3

YAP-030603-287

SAUTV5®




4. Install the adapter cable included in the kit. Feed the end of the adapter cable with the black male and female connectors through the access panel (see Figure C), and route the cable along the vehicle's wheel arch toward the taillight (see the yellow dotted line in Figure D). Secure the wiring harness in place with nylon cable ties once it is properly routed.



5. Installing the Toggle Switch.



Unscrew the nut on the toggle switch and note which direction corresponds to “EARTH” (see Figure E); you will need to plug the black wire into this terminal later. Feed the toggle switch through the round hole in the access panel cover, then screw the nut back on to secure the toggle switch to the access panel (see Figure F). Connect the plug with the transparent sleeve on the adapter cable to the corresponding pin on the back of the toggle switch. Note: The red wire's plug must be inserted into the center pin on the back of the toggle switch (see Figure G). Connect the white plug on the adapter cable to the plug on the fan (see the red box in Figure H).

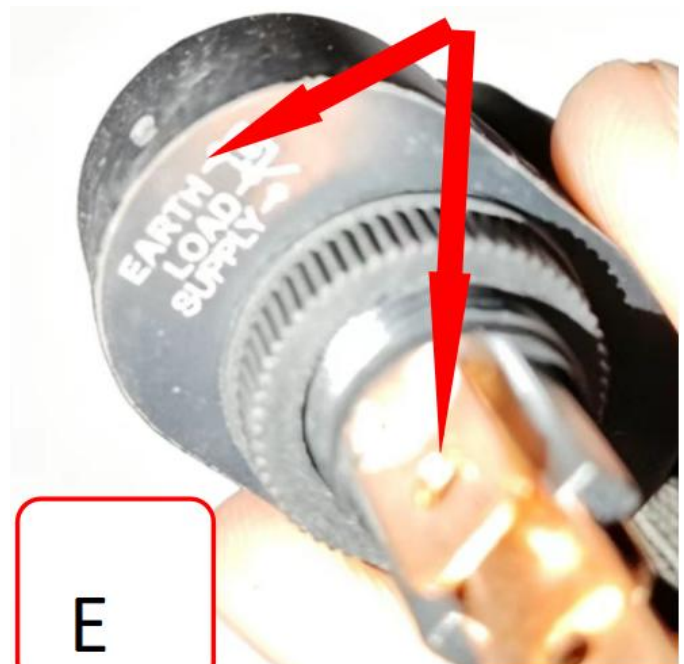

Engine Access Panel with Cooling Fan for Can-Am Maverick X3

SAUTV5®

YAP-030603-287

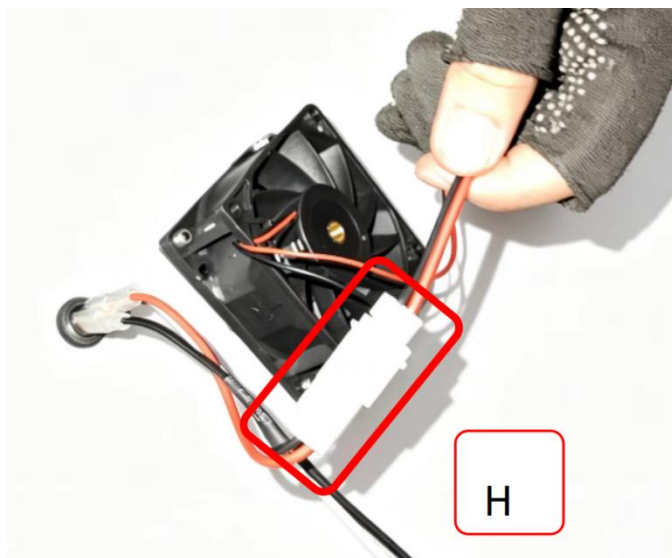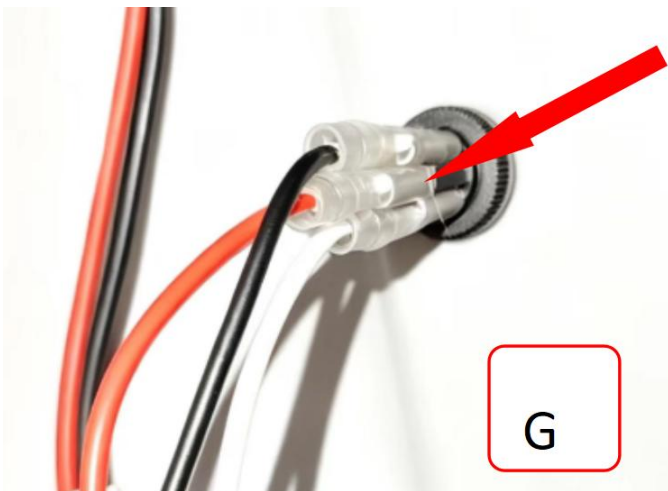

6. Connect the black plug on the adapter cable to the tail light connector.

Unplug the vehicle's tail light harness connector, then connect the black plug on the adapter cable to both the vehicle harness connector and the tail light connector (see Figures I and J).

7. Installation Complete.

Once the vehicle is powered on, simply flip the toggle switch to turn the fan on or off.

Note: The toggle switch has an indicator light. If you prefer the light to be on while the fan is running or when it is off, swap the positions of the black and white wire connectors in Step 5.

