

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This REAR FENDER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.





3. First, assemble the fenders. Start by putting the fenders together and securing them into a single unit using the provided screws (4*16), nuts, and flat washers, as shown in Figure 2 (assemble the other side in the same manner).

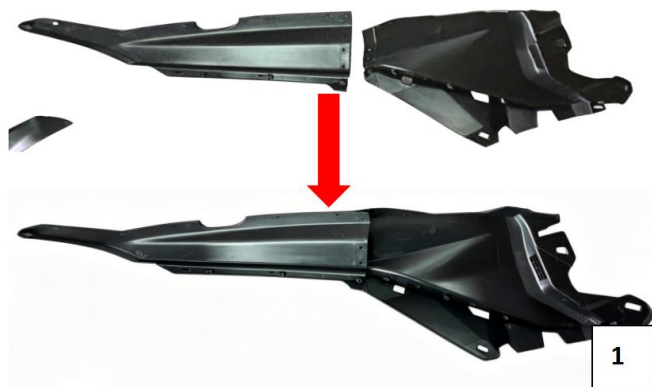


4. Refer to Figures 3–6 to remove the vehicle's original fender (the vehicle wiring harness must also be pried off the fender beforehand).

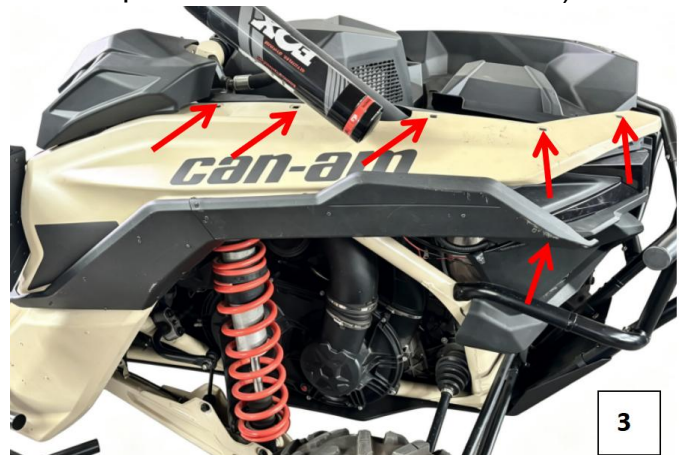

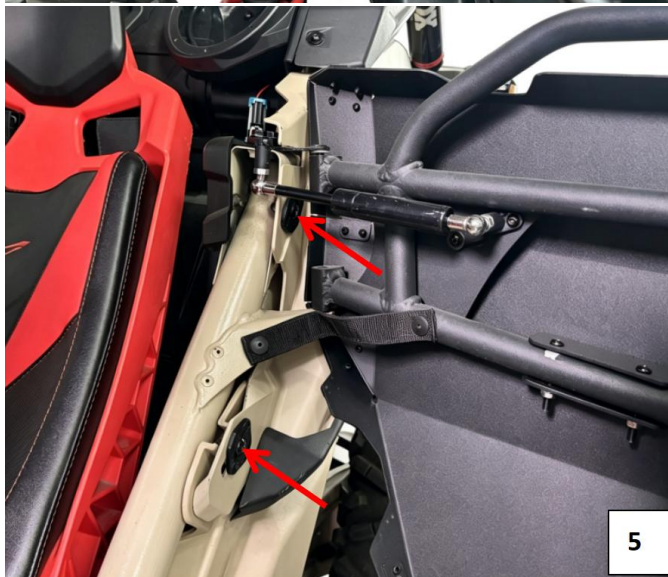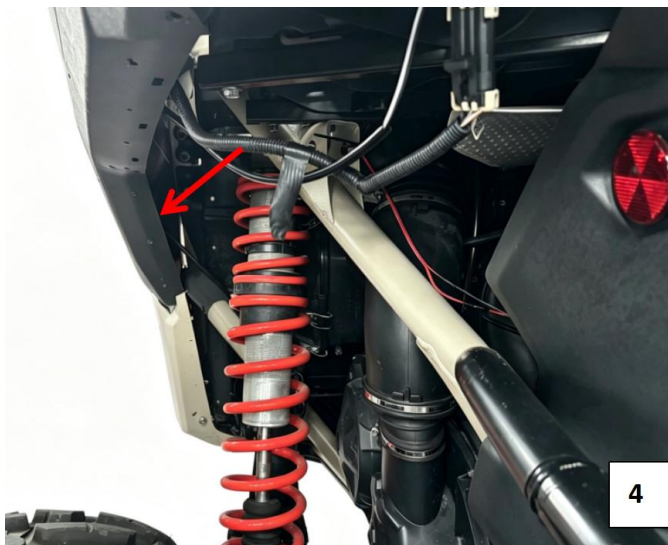

5. Remove the protective panel located beneath the vehicle's original fender, as shown in Figure 7. Reinstall it in the same position on the new fender and secure it using the original screws and nuts, as shown in Figure 8.

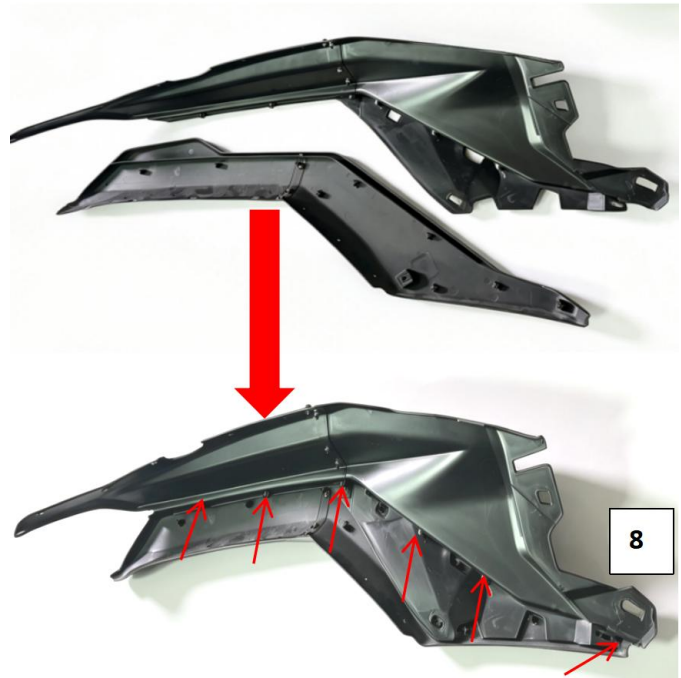

6. Reinstall the new fender with the lower guard attached to the vehicle using the same method you used to remove it. Secure the vehicle's wiring harness as shown in Figure 9, then use the original screws to fasten it in place as shown in Figure 10 (follow the same procedure to replace and install the fender on the other side).



7. Installation complete.

