

Front Grill Mesh for Can-Am Ryker

ZP-YJ-030505-005

SAUTV5

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.


IMPORTANT

This FRONT GRILL MESH KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.

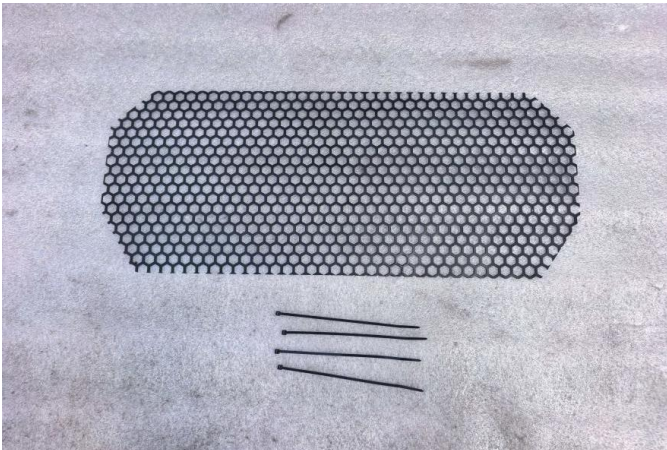

3. Remove the vehicle's plastic hood.

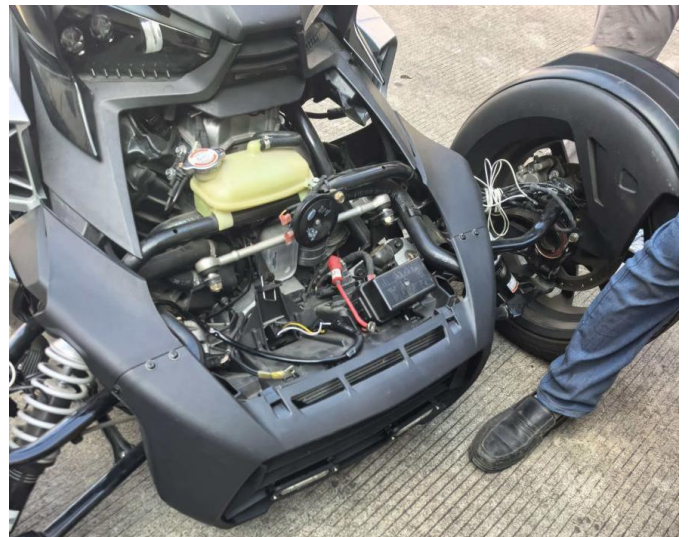

4. Remove the two screws under the chassis and take off the plastic front grille.



Front Grill Mesh for Can-Am Ryker

ZP-YJ-030505-005

SAUTV^{VS}

5. Secure the insect screen to the plastic front grille using four nylon straps, as shown in the figure.



6. Then, reinstall the plastic front grille and the hood in that order to complete the installation.

