

Front Body Panel Kit for Can-Am Maverick X3

SAUTV5

YAP-030603-291 / YAP-030603-292

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This FRONT BODY PANEL KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product images.

Driver's side (LH)



Passenger side (RH)



Note: The assembly method for the Left and Right fenders is identical.

Assemble the main fender body with the sub-component using the provided clamp screws and flat washers.

Important: Place the flat washer only on the outer surface side (head side). Do not place it on the inner side (nut side).


(Refer to Figures 1-4)



Front Body Panel Kit for Can-Am Maverick X3



SAUTV^{VS}

YAP-030603-291 / YAP-030603-292

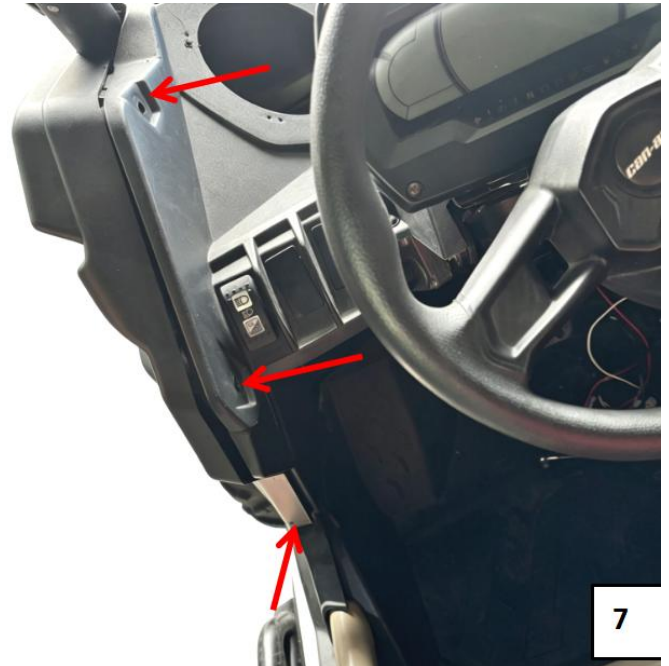

Driver Side (LH) Installation

Step 1: Remove the Original Fender
Unscrew the fastening screws securing the original fender in sequence.
Remove the original fender from the vehicle.
(Refer to Figures 5-8)

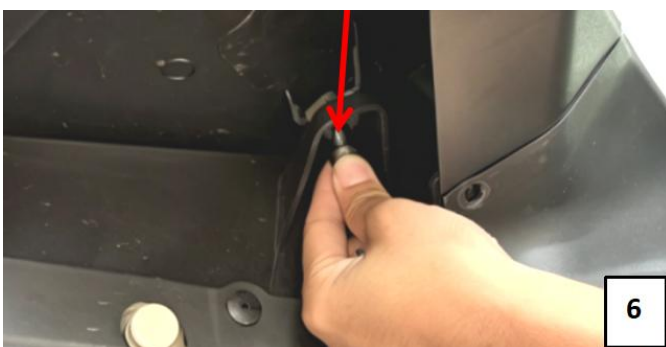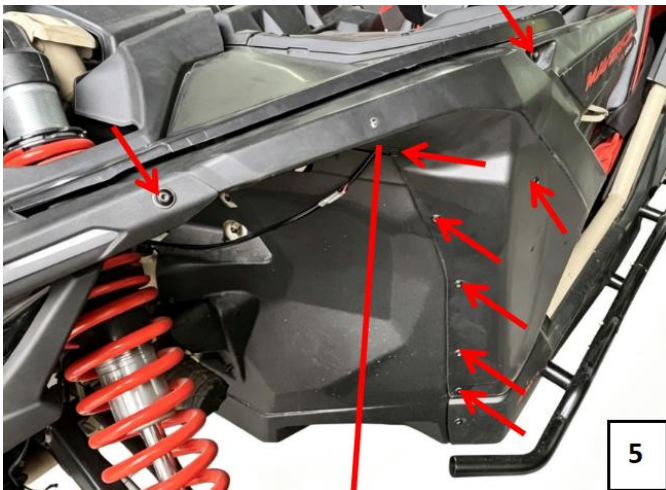

Step 2: Remove the metal clips from the original fender.
Install these metal clips onto the new fender in their original positions.
Position the new fender back onto the vehicle.
Critical Alignment: When installing the fender, align the original vehicle's stop tabs (which have steel clips) with the corresponding slots on the new fender and snap them into place.
Secure the new fender using the original screws. (Refer to Figures 9-11)

Front Body Panel Kit for Can-Am Maverick X3

YAP-030603-291 / YAP-030603-292

SAUTV5



Step 3: Installation complete.



Passenger Side (LH) Installation

Step 1: Access the Fuel Area



Use a tool to pry open the fuel door decorative cover.

Unscrew the fastening screws securing the passenger side dashboard (only the screws indicated in Figure 13 need to be removed).

Gently separate the dashboard from the vehicle body to create working space.

Locate the hose clamp securing the fuel line between the fuel tank opening and the fuel line. Loosen the hose clamp screw.



(Refer to Figures 12-15)

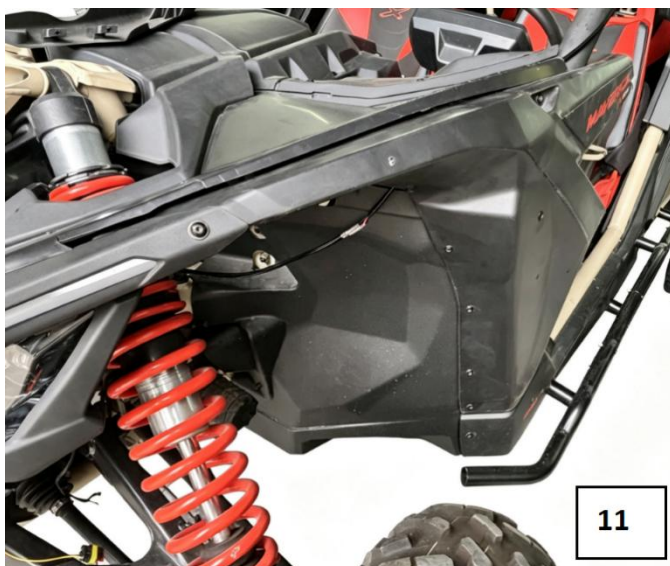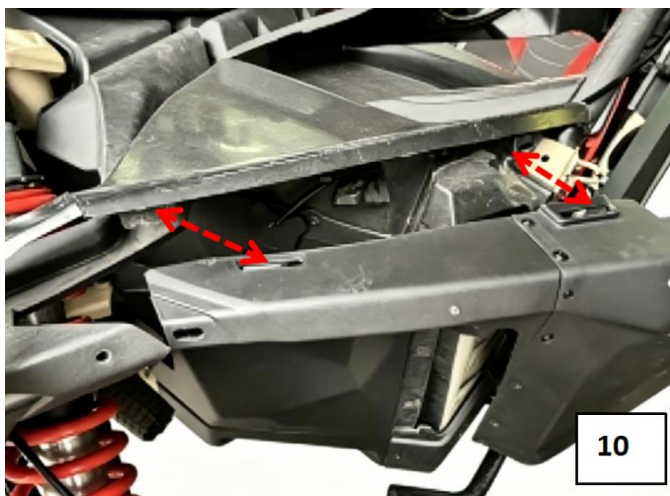

Front Body Panel Kit for Can-Am Maverick X3

YAP-030603-291 / YAP-030603-292

SAUTV⁵

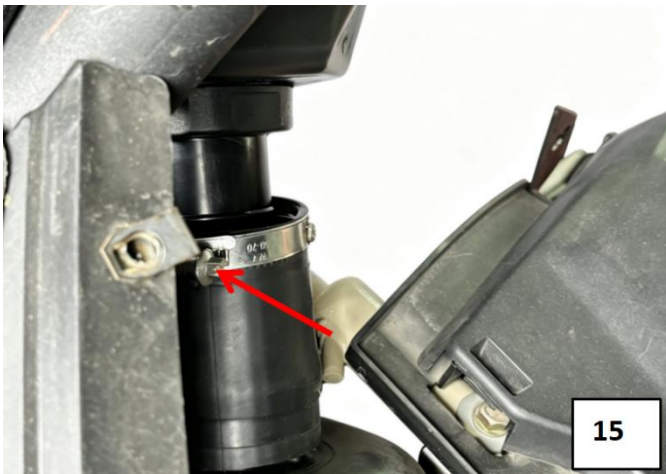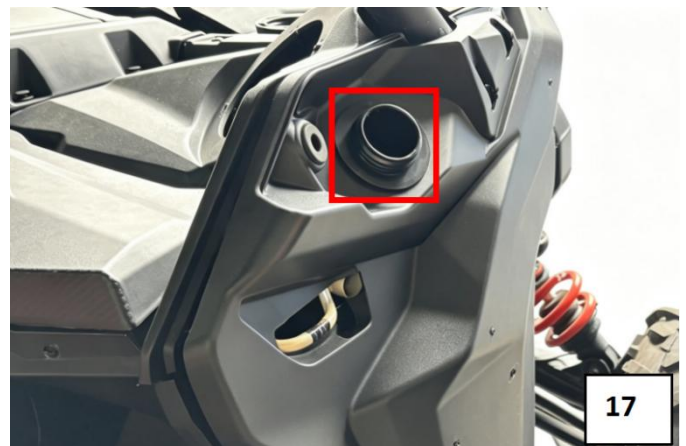

Step 2: Remove Original Fender and Fuel Cap
Remove the original fender from the vehicle.
Note: The removal process is similar to the Driver Side, but one additional screw needs to be removed (as indicated in Figure 16).
Unscrew and remove the fuel tank cap.
(Refer to Figures 17-18)

Step 3: Transfer Hardware and Reassemble
Remove the following components from the original fender:
Metal clips (steel brackets)
Rubber rings/gaskets
Fuel tank conversion port/adaptor
Install these components onto the new fender in their original positions.
(Refer to Figures 19-21)
Install the new fender back onto the vehicle and secure it using the original screws.

Front Body Panel Kit for Can-Am Maverick X3

SAUTV5

YAP-030603-291 / YAP-030603-292

Reconnect the fuel line to the fuel tank opening.
Tighten the hose clamp screw securely.
Reinstall the dashboard and secure the fuel
door cover. (Refer to Figures 22-23)



Step 4: Installation complete.

