

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This REAR CARGO STORAGE BOXES KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

SIDE CARGO STORAGE BOXES



1. Product image.

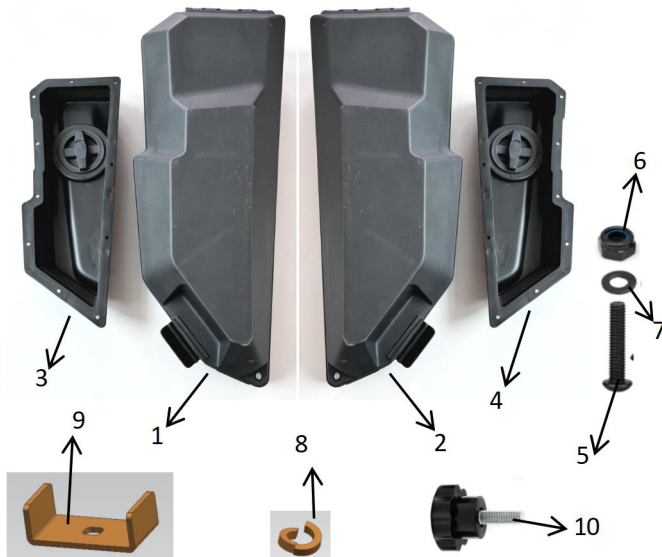

2. Use 6*20 screws and matching nuts to assemble the outer and inner housings into a single unit, as shown in Figures 1–4 (assemble the storage box on the other side in the same manner).



Rear Cargo Storage Box for Can-Am Maverick X3

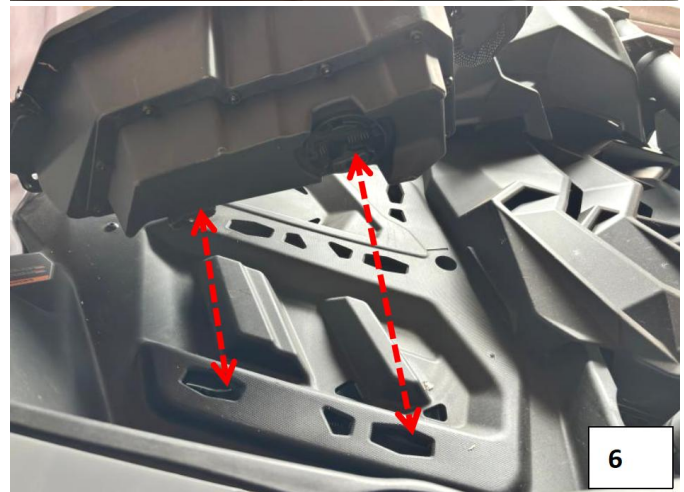
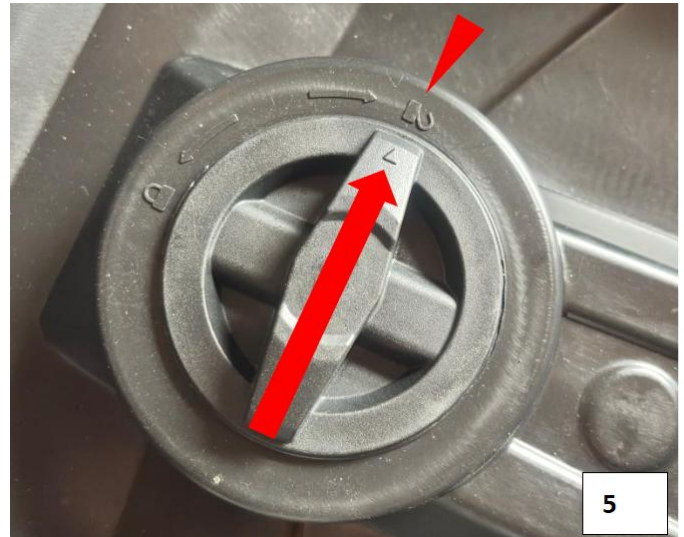


NOTE: Before installing the storage box, make sure the locking latch inside the box is unlocked, as shown in Figure 5:

3. Align and snap the locking latches on the bottom of the storage box into the slots in the vehicle's cargo bed. Then lock the latch inside the box. Use the U-shaped bracket, bakelite handle screws, and M5 spring washers from the accessory kit to secure the mounting hole closest to the rear of the vehicle. Lock the lid in place as shown in Figures 6 – 10 (install the storage box on the other side using the same method).

Rear Cargo Storage Box for Can-Am Maverick X3

SAUTV^{VS}

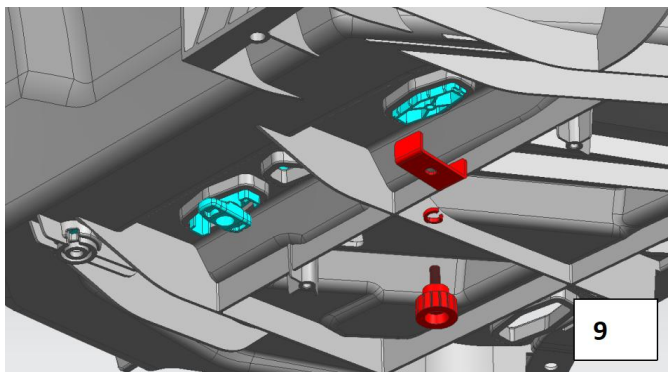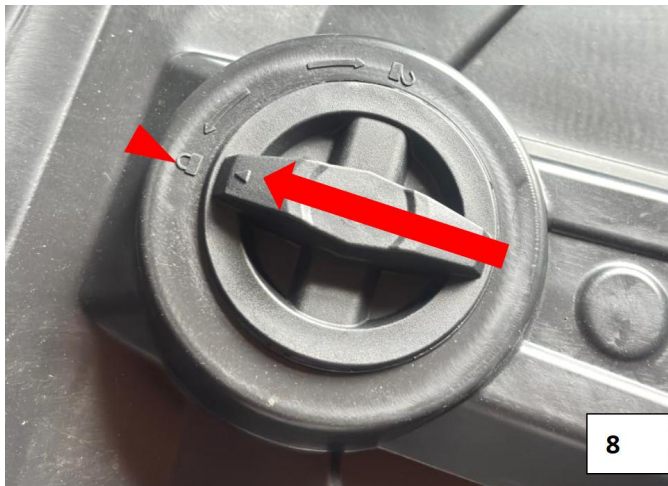

4. Installation complete.




Rear Storage Cargo Trunk Box

1. Product image.



NOTE: Before installing the storage box, make sure the three locking latches inside the box are unlocked, as shown in Figure 1.

2. Snap the locking latches on the bottom of the storage box into the corresponding slots in the vehicle's cargo area, then lock the latches inside the box, as shown in Figures 2–4.

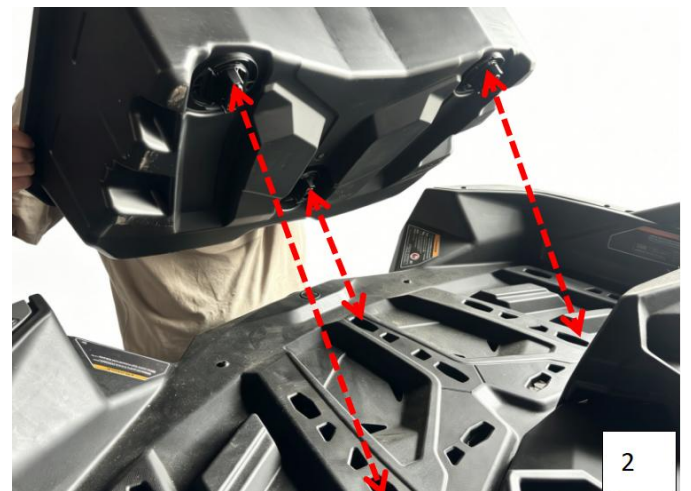

Rear Cargo Storage Box for Can-Am Maverick X3

SAUTVS®



3. Installation complete.

