

# LED Side Chase Lights for Can-Am Maverick R

SAUTV5

YAP-030602-080

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

## IMPORTANT

This LED SIDE CHASE LIGHTS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. If the vehicle is equipped with a roof, remove the roof first; if there is no roof, you can install the chase lights directly.

Refer to Figure A to position the light at the rear of the frame. Use an M6 flat washer and an M6x35 hex socket screw to pass through the larger round hole in the light's metal bracket and the elongated hole in the frame. Then, place an M6 flat washer and an M6 nut onto the screw (as shown in Figure B). Rotate the light fixture around the M6x35 screw in the direction of the curved arrow shown in Figure A. Align the light fixture properly.


Use a 4mm Allen wrench and a 10mm socket to tighten the M6 screw and nut (as shown in Figure C).



# LED Side Chase Lights for Can-Am Maverick R

SAUTV5

YAP-030602-080

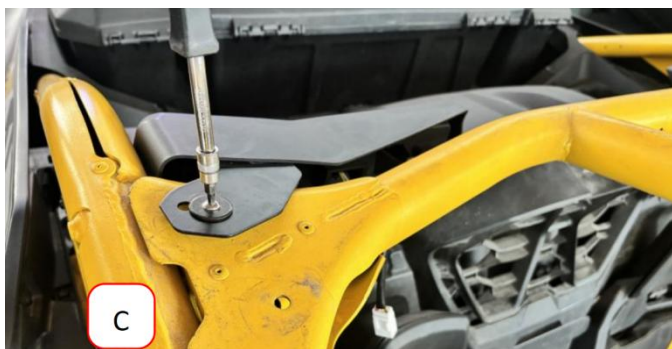

4. Slide the included clamp onto the vehicle's bumper tube (as shown in Figure D), then use an M6x35 hex socket screw to secure the clamp to the steel clip on the bumper light (as shown in Figure E). Install the other bumper light in the same manner.



5. Prepare the adapter cable and connect one end of the plug to the corresponding connector on the bar light harness (as shown in Figure F).

then run the remaining adapter cable along the steel bar to the vehicle's taillight (Figures G and H). Disconnect the vehicle's taillight harness connector from the taillight, then reconnect it using the corresponding connector on the adapter cable (Figure I).

Finally, secure the adapter cable to the vehicle frame with cable ties.



# LED Side Chase Lights for Can-Am Maverick R

SAUTV<sup>VS</sup>

YAP-030602-080



6. Installation complete.

