

Combined Plastic Roof Top for Honda Pioneer 520

SAUTVS®

YAP-030907-023

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *Combined Plastic Roof Top* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

PRODUCT AND ACCESSORIES




序号	名称	数量
1	Roof #1	1 pc
2	Roof #2	1 pc
3	Long plastic spacer block	1 pc
4	U-shaped clamp	1 pc
5	R-shaped clamps	5 pcs
6	Adhesive foam sealing strip	2 meters
7	Hex socket screws 6*45	2 pcs
8	Hex socket screws 6*20	6 pcs
9	Hex socket screws 6*25	2 pcs
10	Self-tapping screws 5*16	6 pcs
11	Flat washers 6*20*1	19 pcs
12	Nuts M6	10 pcs

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. First, peel off the adhesive backing from the supplied foam sealing strip and apply it to the edge of roof #1, as shown in Fig.1. Then, use the M6×20 screws and M5×16 self-tapping screws respectively to assemble the separate roof sections (#1 #2) into a complete unit, as shown in Figs. 2–3:




NOTE: In Fig. 2, the positions marked with red arrows are secured using M6×20 screws, flat washers and M6 nuts. The positions marked with blue arrows are secured using M5×16 self-tapping screws and flat washers (no nuts required).

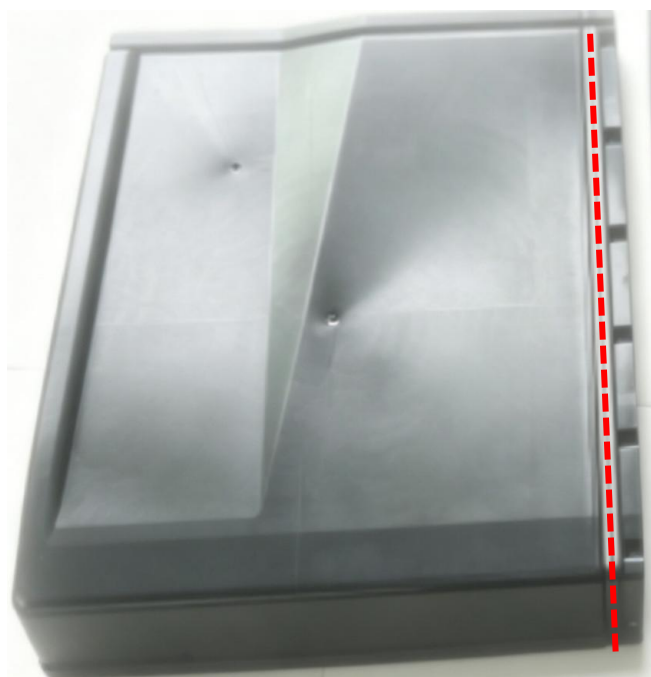

Combined Plastic Roof Top for Honda Pioneer 520

SAUTVS®

YAP-030907-023

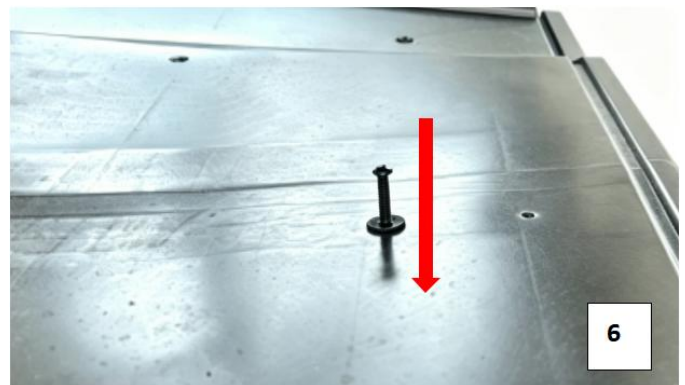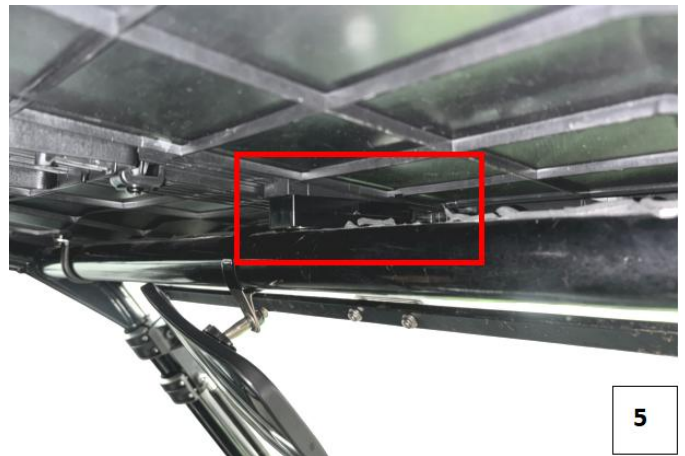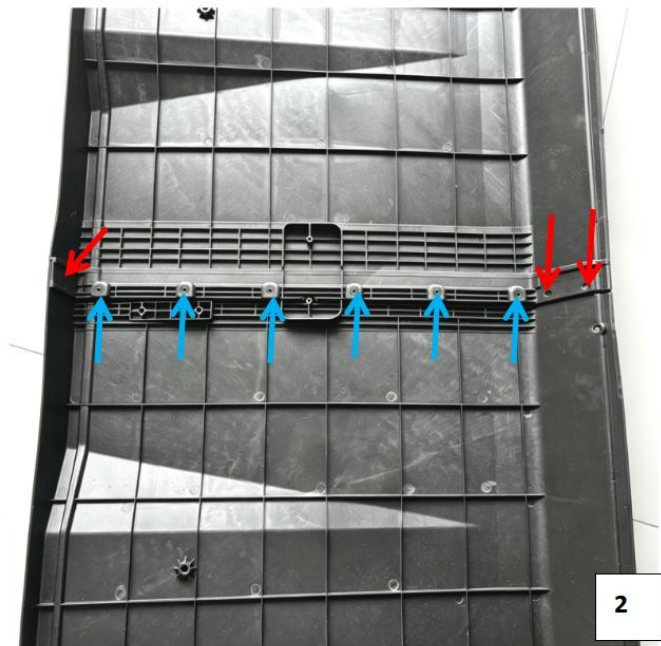


3. Place the assembled roof onto the vehicle. Then, place the supplied long plastic spacer block between the vehicle's front roof bar and the roof (there are corresponding locating slots on the roof for the block.) (as shown in Figs. 4 - 5). Then align the screw holes on the plastic spacer with the corresponding screw holes on the roof. Finally, secure the assembly using the U-shaped clamps, together with M6*45 Hex socket screws, M6 nuts and flat washers. Important: After placing a flat washer on each screw, insert the screw from the top of the roof downward into the cab (as shown in Figs. 6 - 7).

Combined Plastic Roof Top for Honda Pioneer 520

YAP-030907-023

4. Finally, use the R-type clamps together with hex socket screws, nuts and flat washers to further secure the roof, as shown in Figs. 8–9. Note that the screws marked with red arrows are M6*25, and those marked with blue arrows are M6*20. Important: As before, place a flat washer on each screw and insert it from the outside of the roof down into the cab.

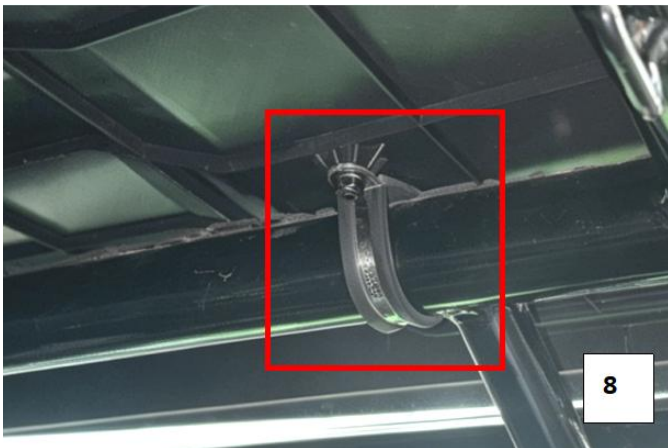

5. The installation is complete!

