

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The Tail Lights are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS


Note: Shift vehicle transmission into "PARK".
Turn key to "OFF" position and remove from vehicle.

Product picture




1. First, open the original rear cargo door panel, then remove the door panel's limit rope bracket and the inner decorative panels on both sides of the cargo compartment. As shown in the figure:

Note: This manual uses the installation of the right taillight as an example.

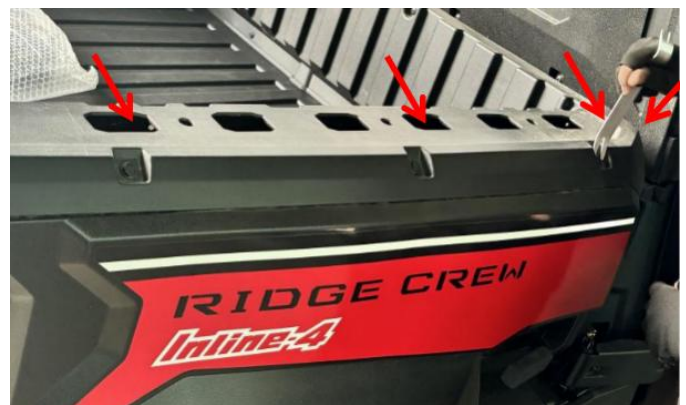


2. Disconnect the wiring harness plug of the original taillight, remove the original taillight, and prepare the new taillight. Then, install the included M6 U-nut from the accessory kit onto the rear housing of the new taillight. Finally, reinstall the new taillight onto the vehicle, securing it with the provided M6*16 screws and M6*14 flat washers, and reconnect the taillight wiring harness plug to the vehicle's wiring harness. As shown in the figure:

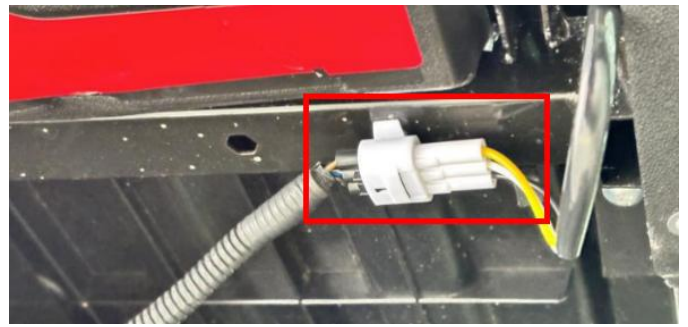

3. After installing the taillight, turn the vehicle key and gently press the brake to check if the taillight functions properly. Once confirmed, reinstall the previously removed inner trim and other accessories to their original positions. As shown in the figure:

Note: For the left taillight installation, repeat steps 1 to 3.

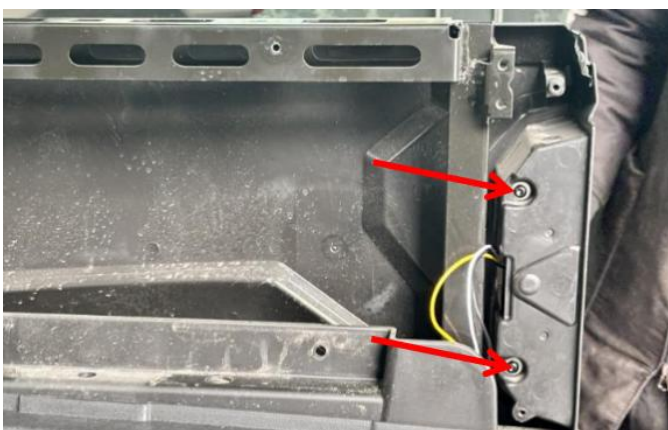



4. Installation complete!

