

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

These tail lights are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.




INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product and accessories picture:






1. First, lift the original rear cargo box and remove the exterior trim panels on both sides of the rear cargo box (once the external mounting screws are removed, the rear cargo box can be laid flat). As shown in picture:

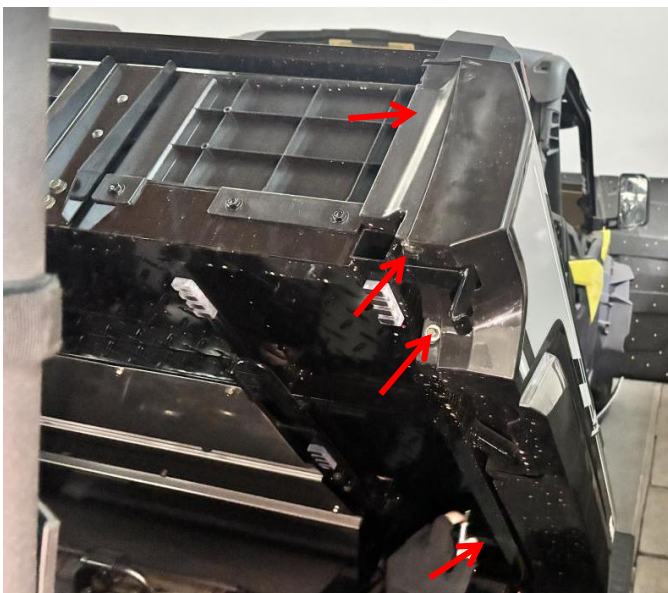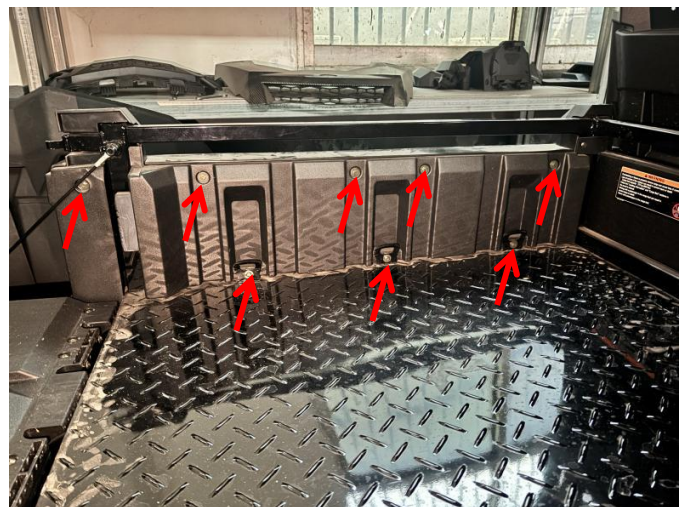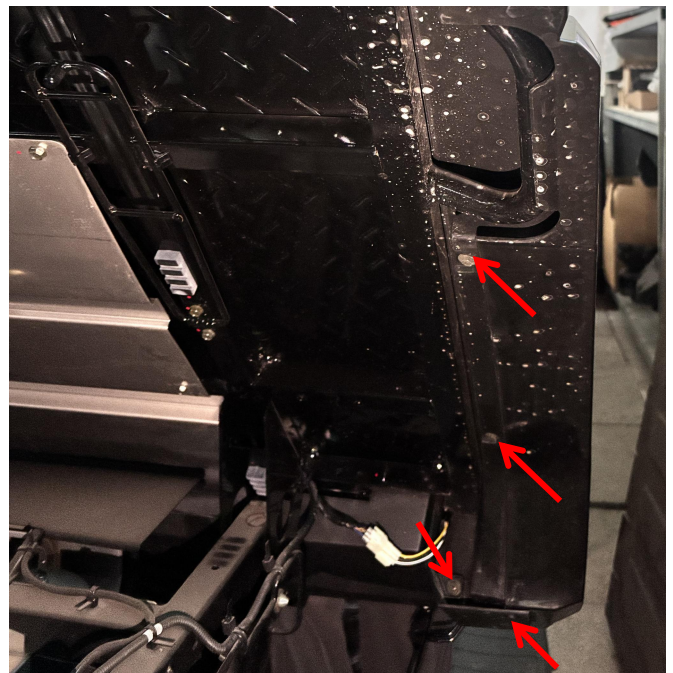



2. Disconnect the wiring harness plug of the original tail light, unscrew the fixing nut of the original tail light, and remove the original tail light. Then replace and install a new tail light, fix it with the original car nut, reconnect the tail light wiring harness plug, and finally reinstall the previously removed outer decorative panel of the rear cargo box to its original position (replace and install the other side in the same way). As shown in picture:

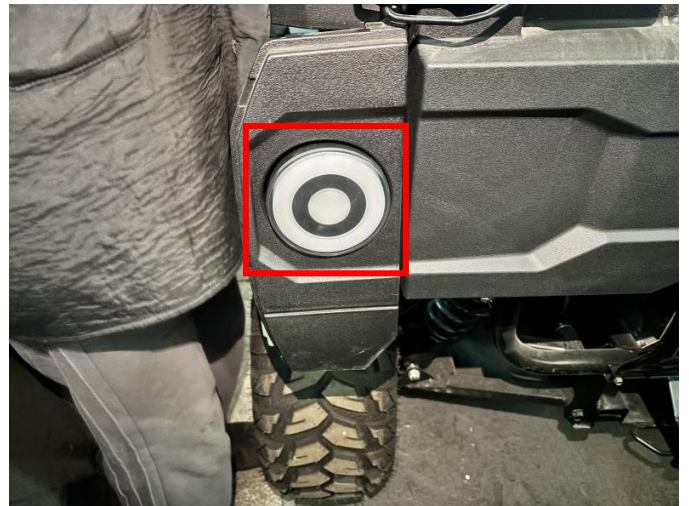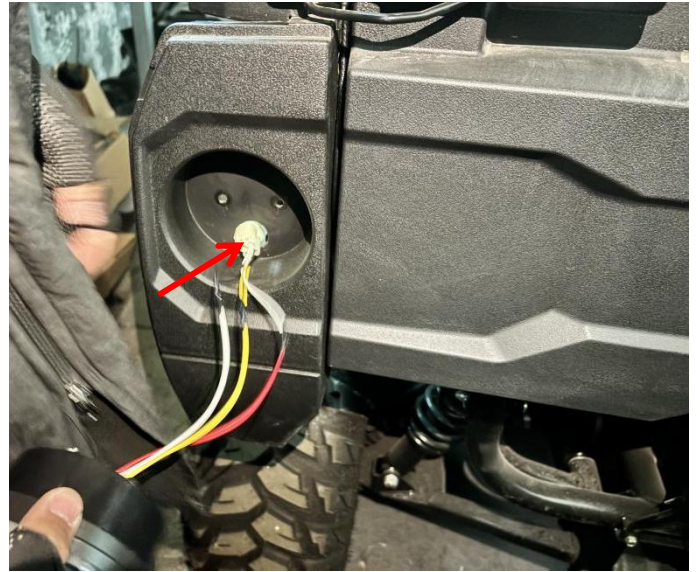

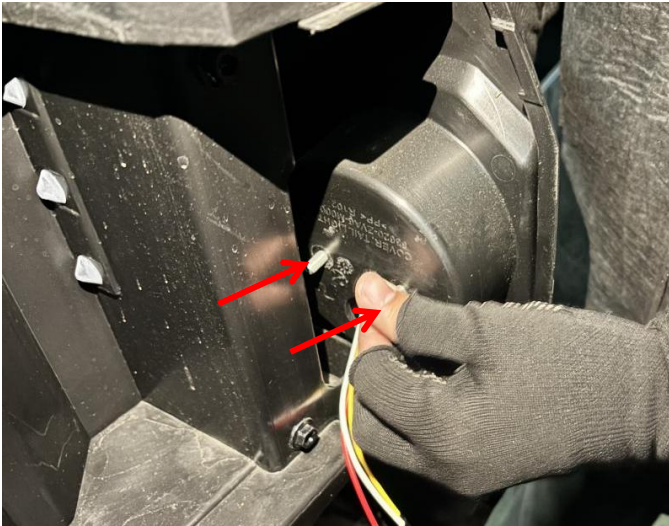

3. Installation completed!