

Rear Fender Flares for E-Z-GO RXV Valor 2025

SAUTVS®

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

These *Rear Fender Flares* are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

PRODUCT



INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Note: Due to packaging and the soft material of the product, before installation, first check if the indicated area in the image is deformed. If deformation is present, use palm pressure to push it in the opposite direction and hold for 3-5 seconds.



Rear Fender Flares for E-Z-GO RXV Valor 2025

2. First, remove the original fender flares, then replace and install the new one. Secure it using the provided screws, nuts, and flat washers (the original vehicle inspection port allows for better visibility of the fender flares mounting points). Repeat the same process for the other side. As shown:

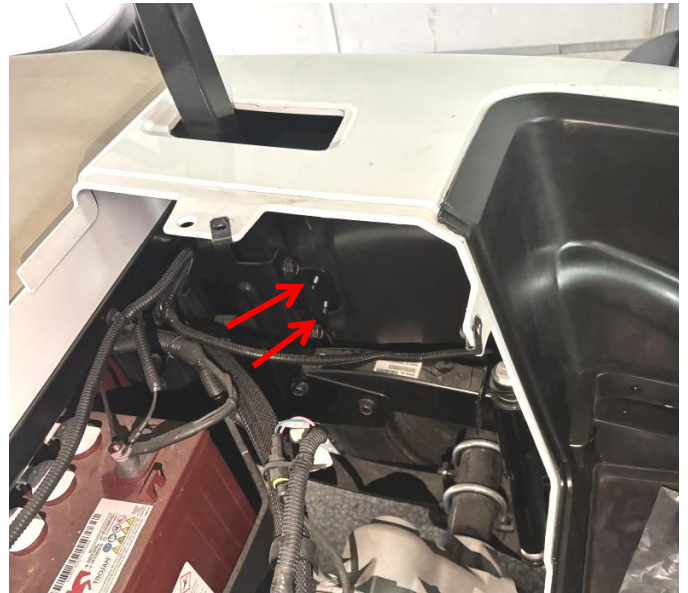

3. The installation is complete!

