

Metal Mesh Grille for Polaris RZR XP 1000/XP 4 1000 2024+



YAP-030503-0279

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The *Mesh Grille* are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture and accessories



1. Use four M6x16 hex socket head screws, four M6 lock nuts, and four M6 washers to mount bracket L and bracket R to the left and right ends of the grille mesh (Part 1). Tighten the screws and nuts as shown:



2. Twist the plastic button to remove the original vehicle's plastic center grille.







3. Remove the two screws from the lower part of the original vehicle, then use the same screws to secure the two Part 2 components to the front position.

Metal Mesh Grille for Polaris RZR XP 1000/XP 4 1000 2024+

YAP-030503-0279



screws to complete the installation as shown.

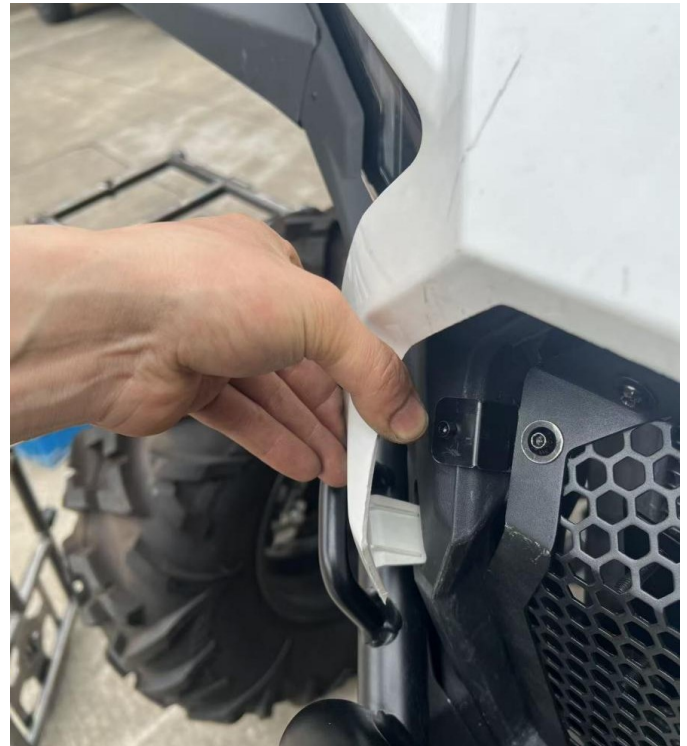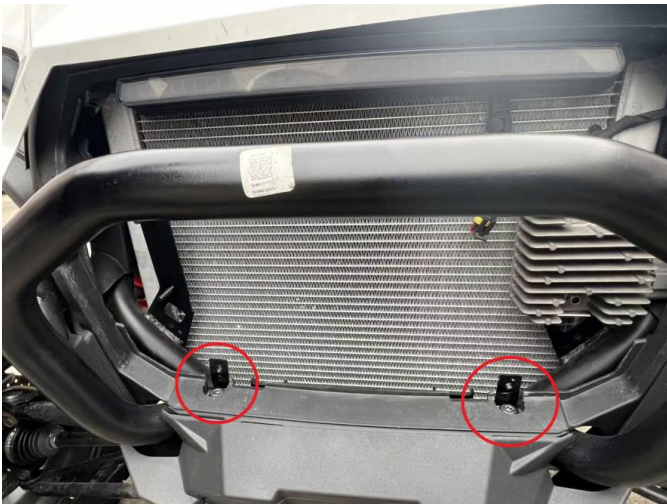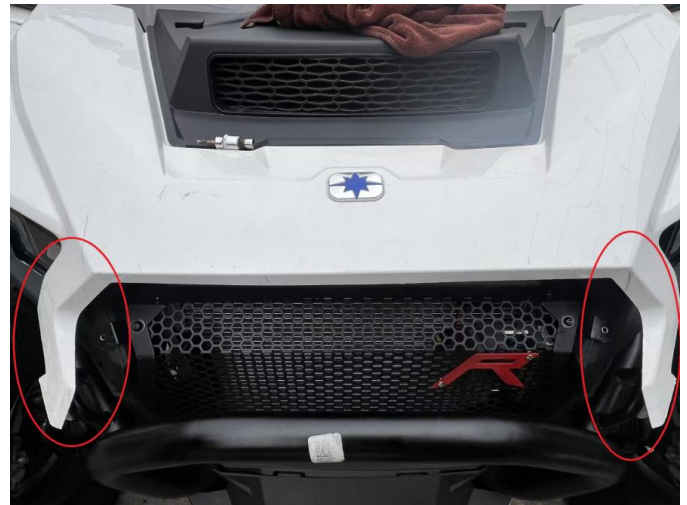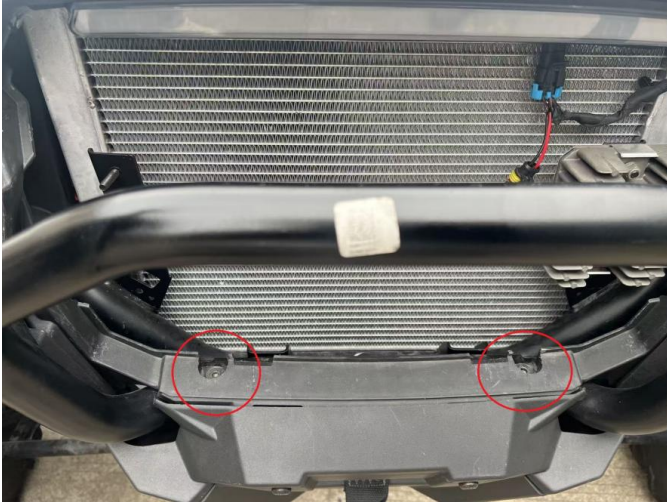

4. Connect the grille mesh (Part 1) to bracket 2 using two M6x20 hex socket head screws and two M6 flat washers. Tighten the screws as illustrated.



5. Release the lower edge of the front bumper plastic trim from its clips, then secure the grille mesh's side brackets to the plastic trim using two M4 self-tapping screws. Tighten the

