

Aluminum Rear Fender Mesh Set for Polaris Xpedition 2024+



YAP-030503-0280

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT


The *Grille Covers* are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK".
Turn key to "OFF" position and remove from vehicle.

Product picture

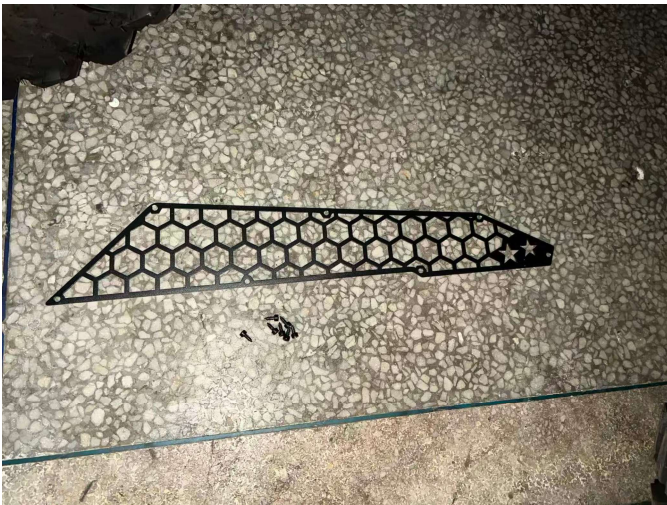

1. Align the left and right protective screens at the fender positions on both sides, then secure and install the protective screens using 14 self-tapping screws, as shown in the picture:



2. The installation is complete.

