

Sun Visors for Polaris Ranger 1000 XP/Crew

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT


The *Sun Visors* are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into “PARK”. Turn key to “OFF” position and remove from vehicle.



Product and accessories picture:

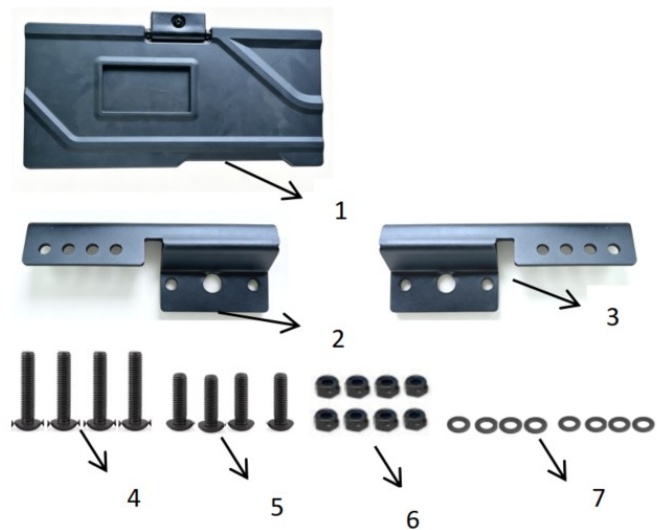

No.	Item	Quantity
1	Sun visor	2
2	Mounting Iron Bracket L	1
3	Mounting Iron Bracket R	1
4	Screw M6*25	4
5	Screw M6*16	4
6	Nut M6	8
7	Flat washer M6	8

Here are the installation instructions for the passenger side (R) sun visor:

1. Align the passenger-side iron bracket with the screw holes on the sun visor (see Figure 1), then secure it using the provided screws (M6*25) as shown in Figure 2.

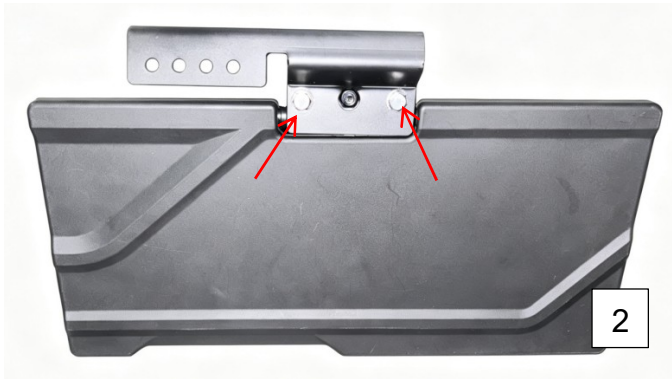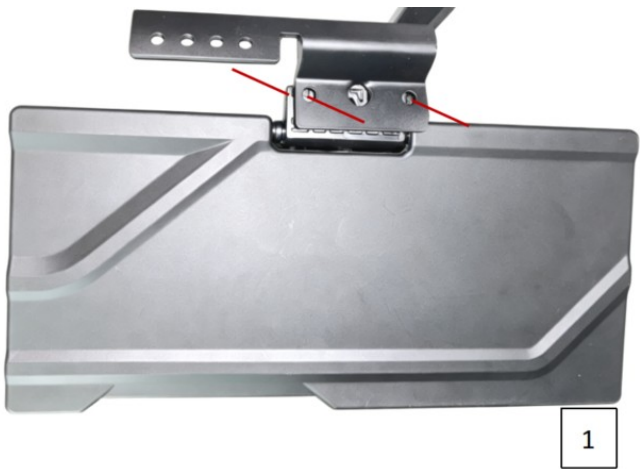

2. Align the sun visor iron bracket with the pre-drilled screw holes on the vehicle roof (see Figure 3). Pre-tighten using screws (M6*16), nuts, and flat washers. Adjust the sun visor to the correct position, then fully tighten the screws and nuts as shown in Figure 4.

Note: Repeat steps 1-2 for the driver-side sun visor installation.

Sun Visors for Polaris Ranger 1000 XP/Crew



3. Installation complete!

